

SMARC Eval-Carrier-2.1

User Guide Rev. 0.2

This page has been intentionally left blank

 SMARC EVAL-CARRIER-2.1 - USER GUIDE

Disclaimer

Kontron would like to point out that the information contained in this manual may be subject to alteration, particularly as a result of the constant upgrading of Kontron products. This document does not entail any guarantee on the part of Kontron with respect to technical processes described in the manual or any product characteristics set out in the manual. Kontron assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright or mask work rights to these products and makes no representations or warranties that these products are free from patent, copyright or mask work right infringement unless otherwise specified. Applications that are described in this manual are for illustration purposes only. Kontron makes no representation or warranty that such application will be suitable for the specified use without further testing or modification. Kontron expressly informs the user that this manual only contains a general description of processes and instructions which may not be applicable in every individual case. In cases of doubt, please contact Kontron.

This manual is protected by copyright. All rights are reserved by Kontron. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the express written permission of Kontron. Kontron points out that the information contained in this manual is constantly being updated in line with the technical alterations and improvements made by Kontron to the products and thus this manual only reflects the technical status of the products by Kontron at the time of publishing.

Brand and product names are trademarks or registered trademarks of their respective owners.

©2021 by Kontron Europe GmbH

Kontron Europe GmbH

Gutenbergstraße 2
85737 Ismaning
Germany
www.kontron.com

Intended Use

THIS DEVICE AND ASSOCIATED SOFTWARE ARE NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE OR RESALE FOR THE OPERATION OF NUCLEAR FACILITIES, THE NAVIGATION, CONTROL OR COMMUNICATION SYSTEMS FOR AIRCRAFT OR OTHER TRANSPORTATION, AIR TRAFFIC CONTROL, LIFE SUPPORT OR LIFE SUSTAINING APPLICATIONS, WEAPONS SYSTEMS, OR ANY OTHER APPLICATION IN A HAZARDOUS ENVIRONMENT, OR REQUIRING FAIL-SAFE PERFORMANCE, OR IN WHICH THE FAILURE OF PRODUCTS COULD LEAD DIRECTLY TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE (COLLECTIVELY, "HIGH RISK APPLICATIONS").

You understand and agree that your use of Kontron devices as a component in High Risk Applications is entirely at your risk. To minimize the risks associated with your products and applications, you should provide adequate design and operating safeguards. You are solely responsible for compliance with all legal, regulatory, safety, and security related requirements concerning your products. You are responsible to ensure that your systems (and any Kontron hardware or software components incorporated in your systems) meet all applicable requirements. Unless otherwise stated in the product documentation, the Kontron device is not provided with error-tolerance capabilities and cannot therefore be deemed as being engineered, manufactured or setup to be compliant for implementation or for resale as device in High Risk Applications. All application and safety related information in this document (including application descriptions, suggested safety measures, suggested Kontron products, and other materials) is provided for reference only.

CAUTION

Handling and operation of the product is permitted only for trained personnel within a work place that is access controlled. Please follow the "General Safety Instructions" supplied with the system.

NOTICE

You find the most recent version of the "General Safety Instructions" online in the download area of this product.

Revision History

Revision	Brief Description of Changes	Date of Issue	Author
0.1	Initial Draft from SMARC Evalcarrier 2 User Guide	2023-March-08	uma
0.2	Updated with remarks from development	2023-June-16	uma

Terms and Conditions

Kontron warrants products in accordance with defined regional warranty periods. For more information about warranty compliance and conformity, and the warranty period in your region, visit <http://www.kontron.com/terms-and-conditions>.

Kontron sells products worldwide and declares regional General Terms & Conditions of Sale, and Purchase Order Terms & Conditions. Visit <http://www.kontron.com/terms-and-conditions>.

For contact information, refer to the corporate offices contact information on the last page of this user guide or visit our website [CONTACT US](#).

Customer Support

Find Kontron contacts by visiting: <https://www.kontron.de/support-and-services>.

Customer Service

As a trusted technology innovator and global solutions provider, Kontron extends its embedded market strengths into a services portfolio allowing companies to break the barriers of traditional product lifecycles. Proven product expertise coupled with collaborative and highly-experienced support enables Kontron to provide exceptional peace of mind to build and maintain successful products.







For more details on Kontron's service offerings such as: enhanced repair services, extended warranty, Kontron training academy, and more visit <http://www.kontron.com/support-and-services/services>.

Customer Comments

If you have any difficulties using this user guide, discover an error, or just want to provide some feedback, contact [Kontron support](#). Detail any errors you find. We will correct the errors or problems as soon as possible and post the revised user guide on our website.

Symbols

The following symbols may be used in this manual

⚠ DANGER	DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.
⚠ WARNING	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
NOTICE	NOTICE indicates a property damage message.
⚠ CAUTION	CAUTION indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.
	<p>Electric Shock!</p> <p>This symbol and title warn of hazards due to electrical shocks (> 60 V) when touching products or parts of products. Failure to observe the precautions indicated and/or prescribed by the law may endanger your life/health and/or result in damage to your material.</p>
	<p>ESD Sensitive Device!</p> <p>This symbol and title inform that the electronic boards and their components are sensitive to static electricity. Care must therefore be taken during all handling operations and inspections of this product in order to ensure product integrity at all times.</p>
	<p>HOT Surface!</p> <p>Do NOT touch! Allow to cool before servicing.</p>
	<p>Laser!</p> <p>This symbol inform of the risk of exposure to laser beam and light emitting devices (LEDs) from an electrical device. Eye protection per manufacturer notice shall review before servicing.</p>
	<p>This symbol indicates general information about the product and the user guide.</p> <p>This symbol also indicates detail information about the specific product configuration.</p>
	<p>This symbol precedes helpful hints and tips for daily use.</p>

For Your Safety

Your new Kontron product was developed and tested carefully to provide all features necessary to ensure its compliance with electrical safety requirements. It was also designed for a long fault-free life. However, the life expectancy of your product can be drastically reduced by improper treatment during unpacking and installation. Therefore, in the interest of your own safety and of the correct operation of your new Kontron product, you are requested to conform with the following guidelines.

High Voltage Safety Instructions

As a precaution and in case of danger, the power connector must be easily accessible. The power connector is the product's main disconnect device.

⚠ CAUTION

Warning

All operations on this product must be carried out by sufficiently skilled personnel only.

⚠ CAUTION



Electric Shock!

Before installing a non hot-swappable Kontron product into a system always ensure that your mains power is switched off. This also applies to the installation of piggybacks. Serious electrical shock hazards can exist during all installation, repair, and maintenance operations on this product. Therefore, always unplug the power cable and any other cables which provide external voltages before performing any work on this product.

Earth ground connection to vehicle's chassis or a central grounding point shall remain connected. The earth ground cable shall be the last cable to be disconnected or the first cable to be connected when performing installation or removal procedures on this product.

Special Handling and Unpacking Instruction

NOTICE



ESD Sensitive Device!

Electronic boards and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times.

Do not handle this product out of its protective enclosure while it is not used for operational purposes unless it is otherwise protected.

Whenever possible, unpack or pack this product only at EOS/ESD safe work stations. Where a safe work station is not guaranteed, it is important for the user to be electrically discharged before touching the product with his/her hands or tools. This is most easily done by touching a metal part of your system housing.

It is particularly important to observe standard anti-static precautions when changing piggybacks, ROM devices, jumper settings etc. If the product contains batteries for RTC or memory backup, ensure that the product is not placed on conductive surfaces, including anti-static plastics or sponges. They can cause short circuits and damage the batteries or conductive circuits on the product.

Lithium Battery Precautions

If your product is equipped with a lithium battery, take the following precautions when replacing the battery.

CAUTION

Danger of explosion if the battery is replaced incorrectly.

Replace only with same or equivalent battery type recommended by the manufacturer.

Dispose of used batteries according to the manufacturer's instructions.

General Instructions on Usage

In order to maintain Kontron's product warranty, this product must not be altered or modified in any way. Changes or modifications to the product, that are not explicitly approved by Kontron and described in this User Guide or received from Kontron's Technical Support as a special handling instruction, will void your warranty.

This product should only be installed in or connected to systems that fulfill all necessary technical and specific environmental requirements. This also applies to the operational temperature range of the specific board version, that must not be exceeded. If batteries are present, their temperature restrictions must be taken into account.

In performing all necessary installation and application operations, only follow the instructions supplied by the present User Guide.

Keep all the original packaging material for future storage or warranty shipments. If it is necessary to store or ship the product then re-pack it in the same manner as it was delivered.

Special care is necessary when handling or unpacking the product. See Special Handling and Unpacking Instruction.

Environmental Protection Statement

This product has been manufactured to satisfy environmental protection requirements where possible. Many of the components used (structural parts, printed circuit boards, connectors, batteries, etc.) are capable of being recycled.

Final disposition of this product after its service life must be accomplished in accordance with applicable country, state, or local laws or regulations.



Environmental protection is a high priority with Kontron.

Kontron follows the WEEE directive

You are encouraged to return our products for proper disposal.

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to:

- ▶ Reduce waste arising from electrical and electronic equipment (EEE)
- ▶ Make producers of EEE responsible for the environmental impact of their products, especially when the product become waste
- ▶ Encourage separate collection and subsequent treatment, reuse, recovery, recycling and sound environmental disposal of EEE
- ▶ Improve the environmental performance of all those involved during the lifecycle of EEE

Table of Contents

Symbols.....	7
Table of Contents.....	10
List of Tables.....	11
List of Figures.....	12
1/ Introduction.....	14
2/ Description.....	15
3/ Installation procedure.....	16
3.1. Packing Check List.....	16
3.2. Requirements IEC60950-1.....	16
4/ System specifications.....	17
4.1. Component Main Data.....	17
5/ Jumpers and Connectors.....	20
5.1. Hardware Configuration Setting.....	20
5.1.1. Jumpers and Connectors.....	20
5.2. Mainboard views and I/O locations.....	21
5.3. Front View.....	23
5.4. Front Left View.....	23
5.5. Front Right View.....	24
5.6. Rear Side.....	25
6/ Technical Drawings.....	26
6.1. Block Diagram.....	26
6.2. Technical Drawing with Mounting Hole Positions.....	27
7/ Maintenance and Status Information.....	28
7.1. LEDs.....	28
8/ Pin Definitions.....	32
8.1. SMARC Connector (J1).....	33
8.2. LVDS Connector (J3).....	37
8.3. eDP Connector (J8).....	39
8.4. HDMI connector (J42).....	41
8.5. DP connector (J12).....	42
8.6. Mini PCIe Card socket 1 (J13).....	42
8.7. Mini PCIe Card socket 2 (J20).....	43
8.8. SIM card socket (J46).....	45
8.9. PCIe x1 connector 1 (J2).....	45
8.10. PCIe x1 connector 2 (J5).....	46
8.11. SATA connector (J22).....	47
8.12. Audio Connector Line In (J24/J43).....	47
8.13. Audio Connector (J10).....	48
8.14. RTC battery holder (J37).....	48
8.15. MicroUSB 2.0 OTG connector (J39).....	49
8.16. USB 3.0 Type A (J41).....	49
8.17. USB 3.X USB C Connector (J60).....	51
8.18. USB 2.0 connector (J59).....	52
8.19. Dual LAN Connector (J63).....	53
8.20. Micro- μ SD Card Connector (J11).....	54
8.21. UART-SER Connector (J29/J30).....	55
8.22. CAN Connector (J6/J7).....	56

8.23. Camera Serial Interface (CSI0) Connector (J36).....	57
8.24. Camera Serial Interface (CSI1) Connector (J61).....	58
8.25. GPIO Header (J38).....	59
8.26. Enhanced Serial Peripheral Interface Bus (eSPI) Connector (J47).....	59
8.27. Power Management Header (J45).....	60
8.28. Fan Connector (J62).....	60
8.29. Power-In Connector (J53).....	61
8.30. Alternative Power-In Connector (J66).....	61
8.31. Module Power-In Connector (J54).....	62
8.32. Button Switch.....	63
8.33. Boot Selection Jumpers (J28, J32, J33) and other Jumpers.....	64
9/ Technical Support	68
9.1. Warranty.....	68
9.2. Returning Defective Merchandise.....	69
List of Acronyms.....	70
About Kontron – Member of the S&T Group.....	71

List of Tables

Table 1: Component Main Data.....	17
Table 2: Environmental Conditions	19
Table 3: Jumpers and Connectors.....	20
Table 4: Power LEDs.....	28
Table 5: Backlight voltage LEDs.....	29
Table 6: GPIO LEDs	29
Table 7: Watchdog LEDs.....	30
Table 8: Audio selection LEDs	30
Table 9: SATA Activity LEDs, see board position 31.....	30
Table 10: mPCIe slot A LEDs, see board position 31	30
Table 11: mPCIe slot B LEDs, see board position 31.....	31
Table 12: Connector Definitions.....	32
Table 13: SMARC Connector (J1).....	33
Table 14: LVDS connector	37
Table 15: eDP Connector.....	39
Table 16: HDMI connector	41
Table 17: DP connector.....	42
Table 18: Mini PCIe Card.....	42
Table 19: Mini PCIe Card	43
Table 20: SIM card socket.....	45
Table 21: PCIe x1 connector	45
Table 22: PCIe x1 connector	46
Table 23: SATA.....	47
Table 24: Pin Assignment J4324 (Line Out, green, Figure 24 left).....	47
Table 25: Pin Assignment J43 (Line In, blue, Figure 24 right).....	47
Table 26: Audio Connector Header	48
Table 27: RTC battery holder	48
Table 28: MicroUSB 2.0 OTG	49
Table 29: Pin Assignment.....	49
Table 30: Signal Description	50
Table 31: USB Header.....	51
Table 32: USB 2.0 connector.....	52
Table 33: LAN Connector (2 times)	53
Table 34: Left LEDs LAN Connector.....	53
Table 35: Right LEDs LAN Connector.....	53

Table 36: Micro- μ SD Card Connector	54
Table 37: J29 Bottom SER0/UART0	55
Table 38: J29 Top SER1/UART1.....	55
Table 39: J30 Bottom SER2/UART2.....	56
Table 40: J30 Top SER3/UART3.....	56
Table 41: CAN_0/CAN_1 Connector	56
Table 42: Camera CSI Connector	57
Table 43: Camera CSI Connector	58
Table 44: GPIO Header	59
Table 45: eSPI Connector	59
Table 46: Power Management Header	60
Table 47: Fan Connector	60
Table 48: Power Button (SW3, J26).....	63
Table 49: Reset Button (SW1, J25)	64
Table 50: Force Recovery Button (SW4, J27).....	64
Table 51: Boot Selection Jumpers.....	64
Table 52: Display Power Select Jumper (J4).....	65
Table 53: Backlight Power Select Jumper (J23).....	65
Table 54: LID Jumper (J34).....	65
Table 55: TEST Jumper (J35).....	65
Table 56: LEDs Enable Jumper (J44)	65
Table 57: RESET Jumper (J25).....	65
Table 58: Power Jumper (J26).....	66
Table 59: Force Recovery Jumper (J27).....	66
Table 60: Module Power Select Jumper (J55, J56, J57).....	66
Table 61: Audio Channel Jumper for I2S or HDA (J31).....	66
Table 62: mPCIe-1WLAN Disable Jumper (J49, J50)	66
Table 63: mPCIe-1WLAN Disable Jumper (J51, J52).....	66
Table 64: RTC Jumper (J58).....	67

List of Figures

Figure 1: Carrier board with SMARC interface.....	15
Figure 2: Top View.....	21
Figure 3: Top View with LEDs and Jumper	22
Figure 4: Front View.....	23
Figure 5: Front Left View	23
Figure 6: Front Right View	24
Figure 7: Rear Side from SMARC Eval-Carrier-2	25
Figure 8: Block Diagram for the SMARC Eval-Carrier-2.1.....	26
Figure 9: Red Jumper on position INT	26
Figure 10: Eval-Carrier-2 with Mounting Hole Positions (red circles, Dimensions in Millimeter).....	27
Figure 11: Power LEDs, see board position 30.....	28
Figure 12: GPIO and Backlight LEDs, see board position 29.....	29
Figure 13: GPIO and Backlight LEDs, see board position 32.....	30
Figure 14: 314-pin SMARC Connector for SMARC-Interface.....	33
Figure 15: 40-pin LVDS connector.....	37
Figure 16: 40-pin eDP Connector.....	39
Figure 17: 19-pin HDMI connector	41
Figure 18: 20-pin DP connector	42
Figure 19: 52-pin Mini PCIe Card	42
Figure 20: 52-pin Mini PCIe Card	43
Figure 21: 8-pin SIM card socket	45
Figure 22: 52-pin PCIe x1 connector	45
Figure 23: 52-pin PCIe x1 connector	46
Figure 24: Audio Jacks.....	47
Figure 25: 9-pin Audio Connector Header	48

Figure 26: RTC battery holder.....	48
Figure 27: MicroUSB 2.0 OTG connector	49
Figure 28: USB 3.0 socket	49
Figure 29: USB 2.0 High Speed Cable.....	50
Figure 30: USB 3.0 High Speed Cable.....	50
Figure 31: USB C Receptable.....	51
Figure 32: Dual LAN Connector	53
Figure 33: Micro- μ SD Card Connector.....	54
Figure 34: Double D-SUB 9-pin Connector	55
Figure 35: CAN_0/CAN_1 Connector	56
Figure 36: 15-pin Camera CSI Connector.....	57
Figure 37: 20-pin Camera CSI Connector.....	58
Figure 38: 2x8-pin GPIO Header	59
Figure 39: 2x7-pin eSPI Connector.....	59
Figure 40: 2x8-pin Power Management Header	60
Figure 41: 4-pin Fan Connector.....	60
Figure 42: Power-In Connector.....	61
Table 43: Power-In Connector	61
Figure 44: Alternative Power-In Connector	61
Table 45: Module Power-In Connector	61
Figure 46: Module Power-In Connector.....	62
Table 47: Module Power-In Connector	62
Figure 48: Red Jumper on position INT.....	63
Figure 49: Button Switch.....	63
Figure 50: Jumpers for Boot Select.....	64
Figure 51: Module Power Select Jumper (J55, J56, J57).....	66
Figure 52: RTC Jumper (J58).....	67

1/ Introduction

This manual describes the Smart Mobility ARChitecture SMARC Eval-Carrier-2.1 board. This document describes the electronic, mechanical and thermal design of the SMARC evaluation carrierboard. It is designed for the testing of SMARC-sXEL, SMARC_SAL28 and other SMARC 2.1 modules. The board will be equipped with DP++ connector, HDMI connector, LVDS connector, two full-size or half-size mPCIe card slot (PCIe + USB 2.0) and two PCIe x1 slot to easily use and test additional cards.


The use of this Users Guide implies a basic knowledge of PC hard- and software. This manual is focussed on describing the special features and is not intended to be a standard PC textbook. New users are recommended to study the short installation procedure stated in the following chapter before switching on the power. All configuration and setup of the CPU board is either done automatically or manually by the user via the BIOS setup menus. Latest revision of this manual, datasheet, BIOS, drivers and BSP's (Board Support Packages) can be downloaded from Kontron Web Page.

2/ Description

The SMARC Eval-Carrier-2.1 is designed on the latest SMARC 2.1.1 specification. The board will be equipped with

- ▶ DP++ connector,
- ▶ HDMI connector,
- ▶ LVDS connector,
- ▶ eDP connector,
- ▶ two mPCIe card slot (PCIe + USB 2.0), both with optional connection to MDIO for SERDES use case
- ▶ two PCIe x1 slot,
- ▶ two USB 3.0 connectors one USB 2.0 OTG connector,
- ▶ SATA connector
- ▶ SIM card slot,
- ▶ Battery holder and super cap
- ▶ Camera interface,
- ▶ CAN interface,
- ▶ two Ethernet connectors,
- ▶ HDA and I2S audio codec,
- ▶ one USB 2.0 connector,
- ▶ μ SD connector,
- ▶ 4x COM ports.

Figure 1: Carrier board with SMARC interface

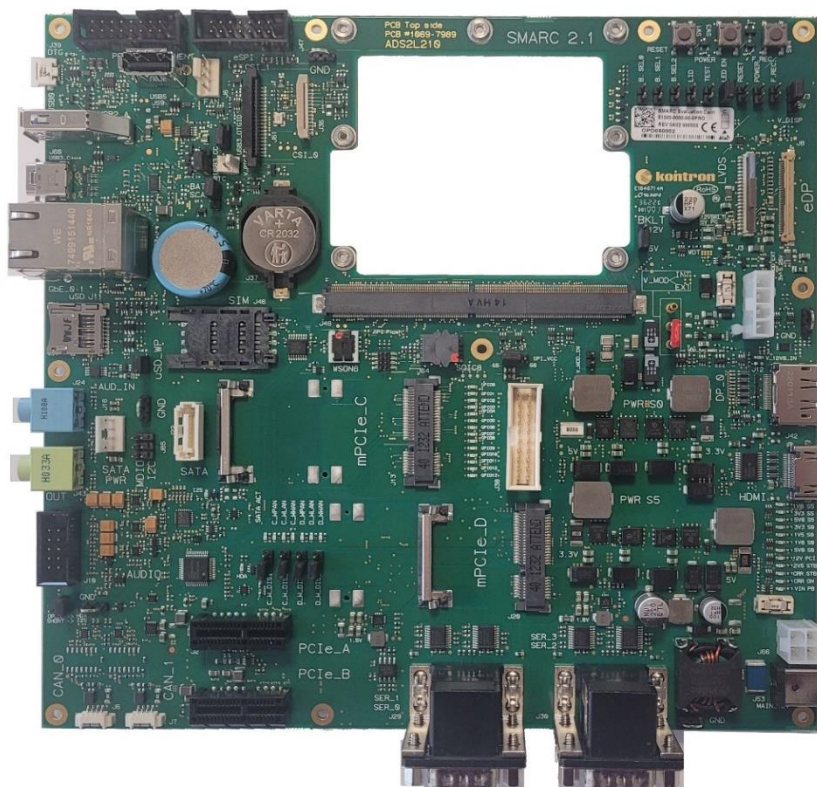

3/ Installation procedure

3.1. Packing Check List

The package includes the following basic items accompany with this manual.

- ▶ One board

If this item is damaged or missed, please contact your vendor and save all packing materials for future replacement and maintenance.

Note: The above packing list is for standard single box packing only.

3.2. Requirements IEC60950-1

Take care when designing chassis interface connectors in order to fulfil the IEC60950-1 standard.

Users of board must evaluate the end product to ensure compliance the requirements of the IEC60950-1 safety standard are met:

The motherboard must be installed in a suitable mechanical, electrical and fire enclosure.

The system in its enclosure must be evaluated for temperature and air flow considerations.

For interfaces having a power pin such as external power or fan, ensure that the connectors and wires are suitably rated. All connections from or to the product shall be with Safety Extra Low Voltage (SELV) circuits only.

Wires have suitable rating to withstand the maximum available power.

The enclosure of the peripheral device fulfills the fire protecting requirements of IEC60950-1.

4/ System specifications

4.1. Component Main Data

The table below summarizes the features of the motherboard.

Table 1: Component Main Data

SMARC Eval-Carrier-2.1	
Form factor	Testing Hardware with 210 mm x 200 mm, max. thickness 3 mm
Memory	
EEPROM System (U78)	The EEPROM type 24LC64 on carrier board connected to SMARC I2C_PM bus.
SPI flash socket (J48) (J64)	SPI flash socket (SOIC8 and WSON7)
EEPROM DDC optional (U72)	The EDID EEPROM type 24C04 on carrier board connected to LVDS_I2C bus. Holding display relevant DDC information. Used by BIOS to initialize LCD. KEAPI support with module.
External I/O	
LAN	2x Gbit-Ethernet ports
USB	1x USB Type C, 1x USB 3.0 Type A, 1x USB 2.0 Type A, 1x micro USB OTG
HDMI	HDMI connector from SMARC module
DP++	DP++ Display port connector from SMARC module
COM1-4	4x COM RS232, 9-pin DSUB
Camera interfaces	Two Camera Header for cameras, including power, GPIO, I2C. Recommended Power should be 3.3 V, fused with 0.75 A resettable fuse.
Audio	Line-in and line-out 3.5mm jack; Front Panel 2x5 Pin Header (2.54mm), supporting both interfaces I2S and HDA selectable by jumper. On audio header is also Microphone and Headphone output.
Internal I/O	
LVDS	40-pin LVDS dual channel connector
Backlight	Backlight PWM and power. Configurable 12 V/ 5 V voltage levels of backlight power for different panels via jumper. Maximum Power is 12 W continuous. If the selected panel exceeds, the provided power by this carrier evaluation of the SMARC module with LVDS can still be done with external panel power.
eDP	40-pin eDP connector; configurable 3.3/5V levels of power via jumper, maximum current capability of 1A load
SATA	SATA port with SATA power connector
PCIe X1	two PCIe 1X slots
mPCIe	two card slots (full size/half size) - PCIe & USB; support all MC3 mPCIe cards
SIM Card	SIM Card connected to both mPCIe
μSD	microSD card socket from SMARC module
Controller Area Network (CAN)	two CAN interfaces
LEDs	SMD LEDs for storage activity, board status, LVDS/eDP backlight, device and power status (power good)
Internal Header and Jumper	
GPIO	GPIO Header 2.54 mm
eSPI header	eSPI header (2.54 mm pin header, dual row)

Power Management Header	2.54 mm pin header, dual row
Battery	1.5F Goldcap and/or CR2032 battery. Optional parallel usage supported.
Fan	4-pin fan connector, Voltage can be 5 V or 12 V (default)
Carrier Board Controllers	
I2C EEPROM	General purpose EEPROM I2C
SPI Socket	WSON socket (32MB) and SOIC8 socket (16MB) flash
HDA Codec	TSI 92HD73D HDA Codec
I2S Codec	WM8904 I2S Codec
EEPROM DDC	Holding display relevant DDC information. Used by BIOS to initialize LCD.
Carrier Board Power	
Power input	12 V input power connector, used as an alternative power for module to support wide voltage range. 12 V DC power connector for powering carrier and module 5 V. Separate input power connector for module with voltage range: 3.0 V to 5.25 V DC
LED status	
Power LEDs	Power good of carrier power lanes
CARRIER_PWR_ON	Power on
CARRIER_STB#	CARRIER_STB#
SATA_ACT#	SATA activity LED
LVDS / eDP Backlight	Indication of LVDS / eDP backlight
Power rails	1.8 V; 3.3 V; 5 V
GPIO	GPIO indication LEDs
Watchdog	Watchdog indication LED

⚠ CAUTION

Danger of explosion if the lithium battery is incorrectly replaced.

- Replace only with the same or equivalent type recommended by the manufacturer
 - Dispose of used batteries according to the manufacturer's instructions
-

Table 2: Environmental Conditions

Operating	0°C to +70°C Some connectors and supercap has operating temperature only 0°C to +70°C, relative humidity (non-condensing) 10 % to 93 % at 40°C
Storage	-40°C to +85°C relative humidity (non-condensing) 10 % to 95 % at 40°C
Electromagnetic Compatibility (EMC) and Interference (EMI)	The board shall be designed to meet the following requirements: EMC Emission EN 55022 Class B, FCC CFR part 15 Class B
Shock/Vibration/Bump	Shock & Vibration according to IEC/EN60068-2-6 and IEC/EN60068-2-27
Theoretical MTBF	not applicable
Restriction of Hazardous Substances (RoHS) II Compliance	RoHS II compliant
Safety	The board shall be designed to meet the following requirements: <ul style="list-style-type: none"> ▶ UL 60950, 3rd edition (US and Canada) ▶ EN 60950-1 (Europe)

5/ Jumpers and Connectors

5.1. Hardware Configuration Setting

This chapter gives the definitions and shows the positions of jumpers, headers and connectors. All of the configuration jumpers on the board are in the proper position. The default settings shipped from factory are marked with an asterisk (*).

In general, jumpers on the board are used to select options for certain features. Some of the jumpers are designed to be user-configurable, allowing for system enhancement. The others are for testing purpose only and should not be altered. To select any option, cover the jumper cap over (SHORT) or remove (NC) it from the jumper pins according to the following instructions. Here, NC stands for "Not Connect".

5.1.1. Jumpers and Connectors


Table 3: Jumpers and Connectors

Connector	Function	Remark
High current jumper (H8 with contacts J55, J56 and J57)	Module power selection: Either internal power via J53 (5 V supply), or external via J54 (3 to 5.25 V supply). ATTENTION: J54 powers the module ONLY! Carrier still needs to be powered via 12V, through J53.	1x3-pin Jumper
5 V/3.3 V (J4)	Display voltage selection (3.3 V or 5 V)	1x3-pin Jumper
5 V/12 V (J23)	Display backlight voltage selection (5 V or 12 V)	1x3-pin Jumper
A_W_Disable_1 (J49)	Disable miniPCIe radio operation	1x2-pin Jumper
A_W_Disable_2 (J50)	Disable miniPCIe radio operation	1x2-pin Jumper
B_W_Disable_1 (J51)	Disable miniPCIe radio operation	1x2-pin Jumper
B_W_Disable_2 (J52)	Disable miniPCIe radio operation	1x2-pin Jumper
CODEK_OPTION_SW_I2S_HDA# (J31)	Audio Codec Multipexor HDA (default)/I2S Codec	1x2-pin Jumper
LEDs ENABLE (J44)	Enable/Disable status and power LEDs	1x2-pin Jumper
V_BAT_JP (J58)	Selection between Battery or Goldcap	1x3-pin Jumper
SMARC (J1)	SMARC connector	1x314-connector
LVDS/eDP (J3)	LVDS dual channel. From SMARC module. Configurable 3.3 V/5 V voltage levels of power for different panels via jumper.	
HDMI (J42)	HDMI connector from SMARC module	
DP++ (J12)	Display port connector from SMARC module	
PCIe x1 (J2/J5)	2x PCIe 1x slot	standard
mPCIe (J13/J20)	2x card slot (full size/half size) - PCIe & USB; support all MC3 mPCIe cards	standard
SATA (J22)	1x connector	standard
Audio (J24 IN/J43 OUT)	Line-in and line-out 3.5mm jack; Front Panel 2x5 Pin Header (2.54mm)	2x5 header
CAN (J6/J7)	2x CAN, Molex 53261-0471 or similar	1x4 header
Power Management Header (J45)	SYS-Signals Header (2.54mm pin header)	2x8 header
SD Card (J9)	SD card write protect setting	

Connector	Function	Remark
Fan (J62)	Fan	1x4 header
GPIO (J38, U33, U34, U35,U11)	GPIO Header 2.54mm	2x8 header
GP I2C/MDIO (J65)	GP I2C/MDIO 2.54mm	2x3 header


5.2. Mainboard views and I/O locations

Figure 2: Top View

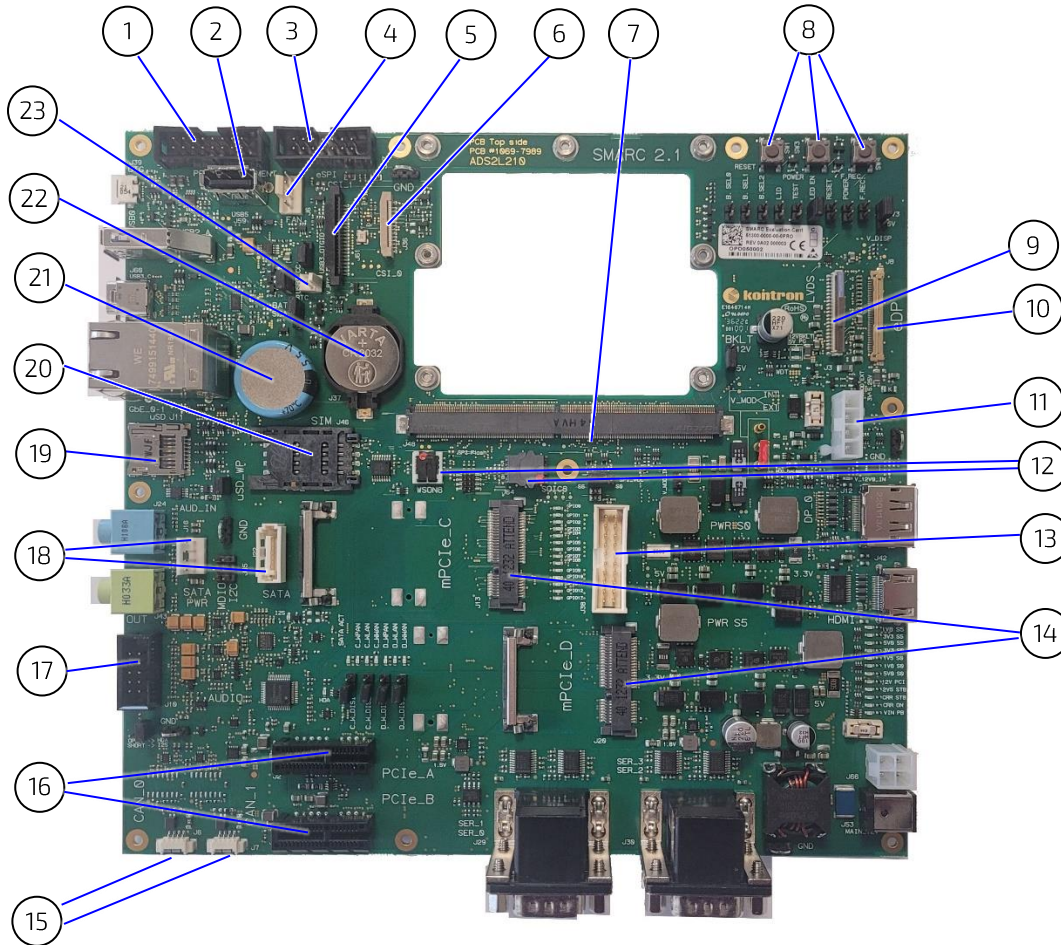

- | | | |
|-------------------------------------|--|----------------------------------|
| 1. Power Management Header (J45) | 8. Button Switches (SW1, SW3, SW4) | 15. 2x CAN (J6, J7) |
| 2. USB 2.0 internal connector (J59) | 9. LVDS (J3) | 16. 2x PCIe x1 (J2, J5) |
| 3. eSPI Header (J47) | 10. eSPI (J8) | 17. Audio Header (J10) |
| 4. Fan Connector (J62) | 11. Input separated module power (J54) | 18. SATA + SATA Power (J22, J65) |
| 5. Camera Serial Interface (J61) | 12. 2xSPI flash sockets (J48, J64) | 19. µSDCard (J11) |
| 6. Camera Serial Interface (J36) | 13. GPIO Header (J38) | 20. SIM Card (J46) |
| 7. SMARC Interface (J1) | 14. 2x mPCIe (J13, J20) | 21. Goldcap (C364) |
| | | 22. Battery (J37) |
| | | 23. RTC voltage connector (J21) |


Figure 3: Top View with LEDs and Jumper

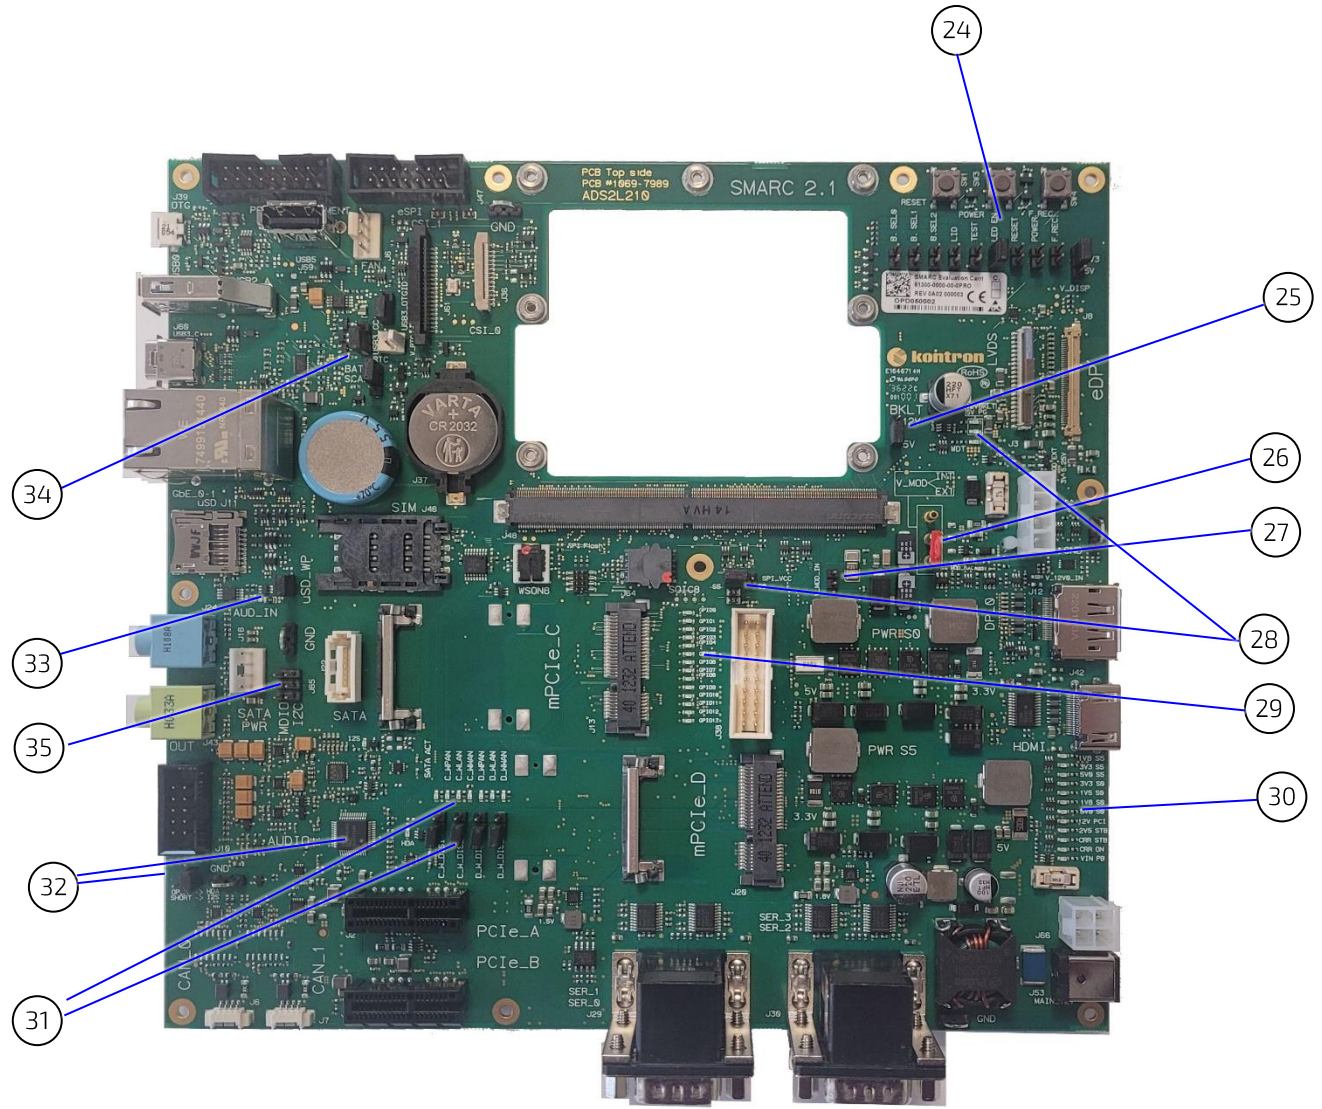

- 24. Jumper Boot Sel 0/1/2, LID, TEST, LED EN, RESET, POWER, F. REC, V DISP 5V 3V3
- 25. Jumper BKLT 12 V/5 V
- 26. Jumper V_MOD 5V/EXT
- 27. V_MOD_IN Module Input Voltage (SENSE)
- 28. Jumper SPI0_VCC
- 29. LEDs GPIO 0-10, 12 V/5 V BKLT, WDT
- 30. LEDs S5, S0, PCI, 2V5 STB, CRR STB, CRR ON
- 31. Jumper for Disabling Radio Operation on mPCIe connectors / LEDs for SATA & mPCIe
- 32. Jumper / LEDs HDA/IS2
- 33. Jumper SDIO_WP
- 34. Jumper V_BAT, USB 3, UB3_OTG Control
- 35. GP I2C / MDIO

5.3. Front View

Figure 4: Front View

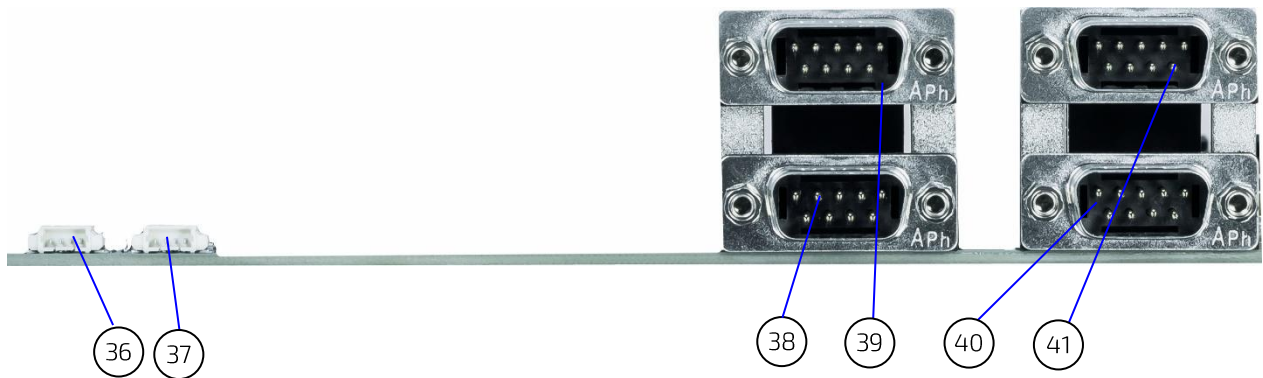

- 36. CAN Connector CAN_0 (J6)
- 37. CAN Connector CAN_1 (J7)
- 38. UART SER_0 (J29)
- 39. UART SER_1 (J29)
- 40. UART SER_2 (J30)
- 41. UART SER_3 (J30)

5.4. Front Left View


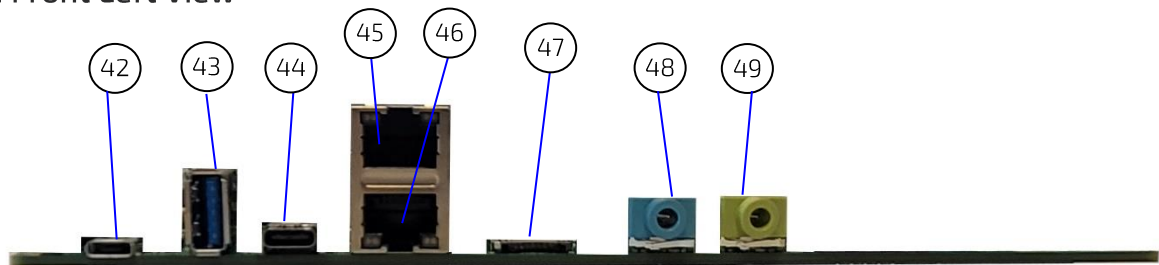


Figure 5: Front Left View

- 42. USB OTG Connector (J39)
- 43. USB 3.X Port 3 (J41)
- 44. USB 3.X Port 2 (USB C Connector) (J60)
- 45. LAN GbE_1 (J63)
- 46. LAN GbE_0 (J63)
- 47. MicroSD Connector (J11)
- 48. Audio IN (J24)
- 49. Audio OUT (J43)

5.5. Front Right View

Figure 6: Front Right View

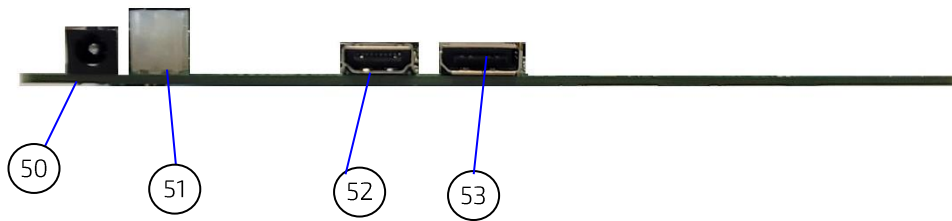

- 50. Power Jack: Main power connector (barrel connector) (J53)
- 51. Power Jack: Main power connector (4 pin connector) (J66)
- 52. HDMI connector (J42)
- 53. DP connector (J12)

5.6. Rear Side

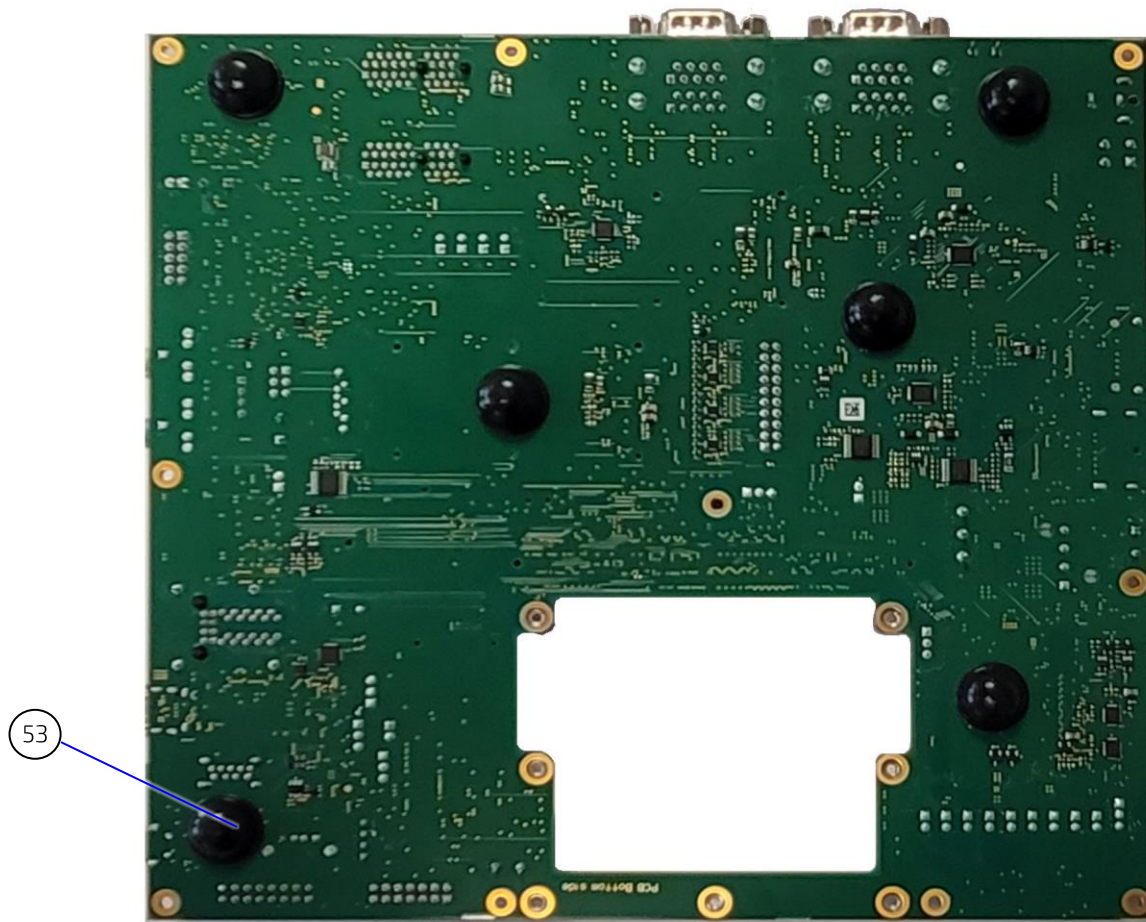


Figure 7: Rear Side from SMARC Eval-Carrier-2

54. Rubber feet 6x

6/ Technical Drawings

6.1. Block Diagram

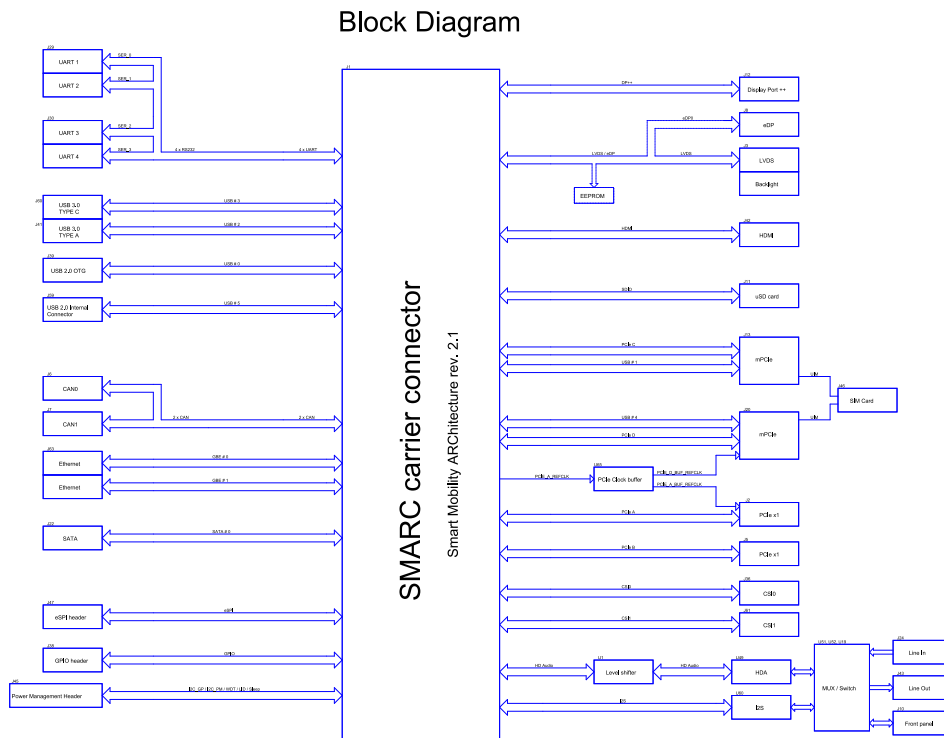



Figure 8: Block Diagram for the SMARC Eval-Carrier-2.1

NOTICE

There are two different ways to power the carrier and module:

- ▶ **Default and recommended:** Power Connector J53 or J66 with 12 V, which also delivers 5 V to the module and 12 V to the board. Jumper V_MOD must be on position INT.


Figure 9: Red Jumper on position INT

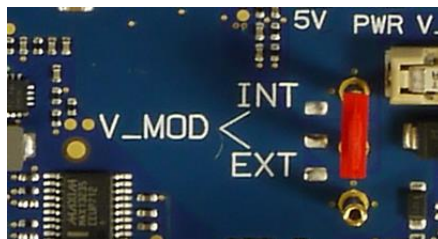

- ▶ **Alternative:** Power Connector J53 or J66 with 12 V for the board and Power Connector J53 with 3.0 – 5.25 V, which delivers power separately to module. Jumper V_MOD must be on position EXT.

6.2. Technical Drawing with Mounting Hole Positions

Figure 10: Eval-Carrier-2 with Mounting Hole Positions (red circles, Dimensions in Millimeter)

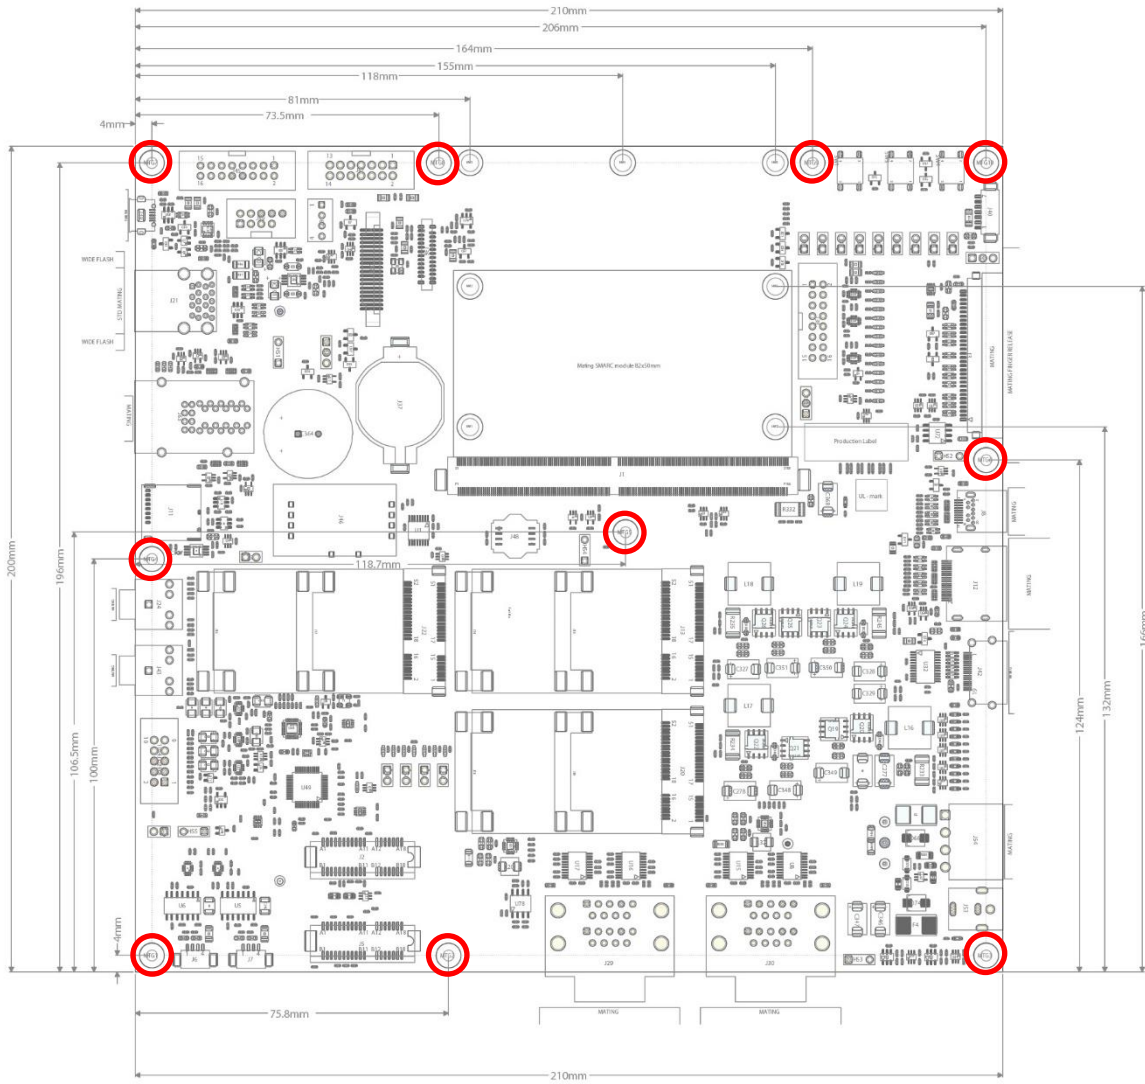

7/ Maintenance and Status Information

7.1. LEDs

Figure 11: Power LEDs, see board position 30



Table 4: Power LEDs

LED Color	Signal	Diode	Function
Green	V_1V8_S5	D59	Voltage V_1V8_S5 is present
Green	V_3V3_S5	D56	Voltage V_3V3_S5 is present
Green	V_5V0_S5	D58	Voltage V_5V0_S5 is present
Green	V_3V3_S0	D57	Voltage V_3V3_S0 is present
Green	V_1V5_S0	D61	Voltage V_1V5_S0 is present
Green	V_1V8_S0	D60	Voltage V_1V8_S0 is present
Green	V_5V0_S0	D38	Voltage V_5V0_S0 is present
Green	V_12V0_PCIE	D39	Voltage V_12V0_PCIE is present
Green	V_2V5_STB	D40	Voltage V_2V5_STB is present
Red	Carrier_STBY#	D41	
Green	Carrier_PWR_ON#	D64	Voltage Carrier_PWR_ON is present
Red	VIN_PWR_BAD#	D75	

Figure 12: GPIO and Backlight LEDs, see board position 29

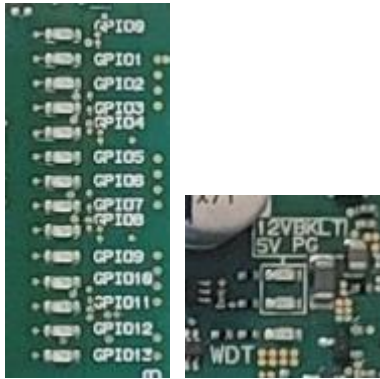


Table 5: Backlight voltage LEDs

LED Color	Signal	Diode	Function
Green	PG_BKLT_5V	D70	LED is shining when voltage is present
Green	PG_BKLT_12V0	D71	LED is shining when voltage is present

Table 6: GPIO LEDs

LED Color	Signal	Diode	Function
Blue	GPIO0/CAM0_PWR#	D8	GPIO0 level indication
Blue	GPIO1/CAM1_PWR#	D9	GPIO1 level indication
Blue	GPIO2/CAM0_RST#	D11	GPIO2 level indication
Blue	GPIO3/CAM1_RST#	D19	GPIO3 level indication
Blue	GPIO4/HDA_RST#	D24	GPIO4 level indication
Blue	GPIO5/PWM_OUT	D25	GPIO5 level indication
Blue	GPIO6/TACHIN	D26	GPIO6 level indication
Blue	GPIO7	D27	GPIO7 level indication
Blue	GPIO8	D28	GPIO8 level indication
Blue	GPIO9	D29	GPIO9 level indication
Blue	GPIO10	D30	GPIO10 level indication
Blue	GPIO11	D31	GPIO11 level indication
Blue	GPIO12	D12	GPIO12 level indication

LED Color	Signal	Diode	Function
Blue	GPIO13	D13	GPIO13 level indication

Table 7: Watchdog LEDs

LED Color	Signal	Diode	Function
Red	WDT	D6	Watchdog indication from module

Figure 13: GPIO and Backlight LEDs, see board position 32

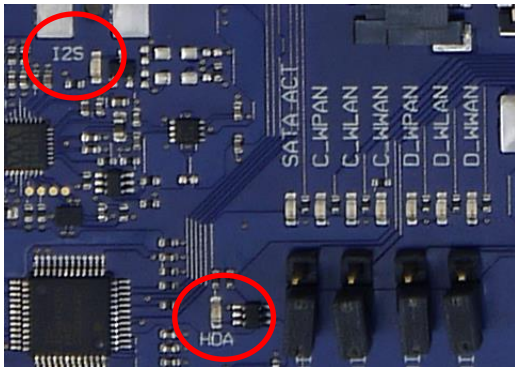


Table 8: Audio selection LEDs

LED Color	Signal	Diode	Function
Yellow	CODEK_OPTION_SW_I2S_HDA#	D44	I2S Codec is active; J31 is closed
Yellow	CODEK_OPTION_SW_I2S_HDA#	D45	HDA Codec is active; J31 is open

Table 9: SATA Activity LEDs, see board position 31

LED Color	Signal	Diode	Function
Red	SATA_ACT	D3	Indicate SATA activity

Table 10: mPCIe slot A LEDs, see board position 31

LED Color	Signal	Diode	Function
Yellow	MPCIEA_WPAN#	D35	WPAN Activity
Yellow	MPCIEA_WLAN#	D34	WLAN Activity
Yellow	MPCIEA_WWAN#	D33	WWAN Activity

Table 11: mPCIe slot B LEDs, see board position 31

LED Color	Signal	Diode	Function
Yellow	MPCIEB_WPAN#	D43	WPAN Activity
Yellow	MPCIEB_WLAN#	D42	WLAN Activity
Yellow	MPCIEB_WWAN#	D36	WWAN Activity

8/ Pin Definitions

The following sections provide pin definitions and detailed description of all on-board connectors. The connector definitions follow the following notation:

Table 12: Connector Definitions

Column Name	Description
Pin	Shows the pin-numbers in the connector. The graphical layout of the connector definition tables is made similar to the physical connectors.
Signal	The mnemonic name of the signal at the current pin. The notation "XX#" states that the signal "XX" is active low.
Type	AI: Analog Input AO: Analog Output I: Input, TTL compatible if nothing else stated IO: Input/Output, TTL compatible if nothing else stated IOT: Bi-directional tristate IO pin. IS: Schmitt-trigger input, TTL compatible. IOC: Input/open-collector Output, TTL compatible IOD: Input/Output, CMOS level Schmitt-triggered (Open drain output) NC: Not Connected O: Output, TTL compatible OC: Output, open-collector or open-drain, TTL compatible OT: Output with tri-state capability, TTL compatible LVDS: Low Voltage Differential Signal PWR: Power supply or ground reference pins.
	Ioh: Typical current in mA flowing out of an output pin through a grounded load, while the output voltage is > 2.4 V DC (if nothing else stated). Iol: Typical current in mA flowing into an output pin from a VCC connected load, while the output voltage is < 0.4 V DC (if nothing else stated).
Pull U/D	On-board pull-up or pull-down resistors on input pins or open-collector output pins.
Note	Special remarks concerning the signal
Designation	Type and number of item described

8.1. SMARC Connector (J1)

The SMARC connector has different pins on both sides:

- ▶ Top side: 74 pins are on the left side, 82 pins on the right side
- ▶ Bottom side: 75 pins are on the left side, 83 pins on the right side

Figure 14: 314-pin SMARC Connector for SMARC-Interface



Table 13: SMARC Connector (J1)

P-Pin	Signal	S-Pin	Signal
P1	SMB_ALERT#	S1	CSI1_TX+/I2C_CAM1_CK
P2	GND	S2	CSI1_TX-/I2C_CAM1_DAT
P3	CSI1_CK+	S3	GND
P4	CSI1_CK-	S4	RSVD
P5	GBE1_SDP	S5	CSIO_TX-/I2C_CAM0_CK
P6	GBE0_SDP	S6	CAM_MCK
P7	CSI1_RX0+	S7	CSIO_TX+/I2C_CAM0_DAT
P8	CSI1_RX0-	S8	CSIO_CK+
P9	GND	S9	CSIO_CK-
P10	CSI1_RX1+	S10	GND
P11	CSI1_RX1-	S11	CSIO_RX0+
P12	GND	S12	CSIO_RX0-
P13	CSI1_RX2+	S13	GND
P14	CSI1_RX2-	S14	CSIO_RX1+
P15	GND	S15	CSIO_RX1-
P16	CSI1_RX3+	S16	GND
P17	CSI1_RX3-	S17	GBE1_MDIO+
P18	GND	S18	GBE1_MDIO-
P19	GBE0_MD13-	S19	GBE1_LINK100#
P20	GBE0_MD13+	S20	GBE1_MD11+
P21	GBE0_LINK100#	S21	GBE1_MD11-
P22	GBE0_LINK1000#	S22	GBE1_LINK1000#
P23	GBE0_MD12-	S23	GBE1_MD12+
P24	GBE0_MD12+	S24	GBE1_MD12-
P25	GBE0_LINK_ACT#	S25	GND
P26	GBE0_MD11-	S26	GBE1_MD13+
P27	GBE0_MD11+	S27	GBE1_MD13-
P28	GBE0_CTREF	S28	GBE1_CTREF
P29	GBE0_MD10-	S29	PCIE_D_TX+/SERDES_0_TX+
P30	GBE0_MD10+	S30	PCIE_D_TX-/SERDES_0_TX
P31	SPIO_CS1#	S31	GBE1_LINK_ACT#

P-Pin	Signal	S-Pin	Signal
P32	GND	S32	PCIE_D_RX+/SERDES_0_RX+
P33	SDIO_WP	S33	PCIE_D_RX-/SERDES_0_RX
P34	SDIO_CMD	S34	GND
P35	SDIO_CD#	S35	USB4+
P36	SDIO_CK	S36	USB4-
P37	SDIO_PWR_EN	S37	USB3_VBUS_DET
P38	GND	S38	AUDIO_MCK
P39	SDIO_D0	S39	I2S0_LRCK
P40	SDIO_D1	S40	I2S0_SDOOUT
P41	SDIO_D2	S41	I2S0_SDIN
P42	SDIO_D3	S42	I2S0_CK
P43	SPI0_CS0#	S43	ESPI_ALERT0#
P44	SPI0_CK	S44	ESPI_ALERT1#
P45	SPI0_DIN	S45	MDIO_CLK
P46	SPI0_DO	S46	MDIO_DAT
P47	GND	S47	GND
P48	SATA_TX+	S48	I2C_GP_CK
P49	SATA_TX-	S49	I2C_GP_DAT
P50	GND	S50	HDA_SYNC/I2S2_LRCK
P51	SATA_RX+	S51	HDA_SDO/I2S2_SDOOUT
P52	SATA_RX-	S52	HDA_SDI/I2S2_SDIN
P53	GND	S53	HDA_CK/I2S2_CK
P54	SPI1_CS0# / ESPI_CS0# / QSPI_CS0#	S54	SATA_ACT#
P55	SPI1_CS1# / ESPI_CS1# / QSPI_CS1#	S55	USB5_EN_OC#
P56	SPI1_CK / ESPI_CK / QSPI_CK	S56	ESPI_IO_2/QSPI_IO_2
P57	SPI1_DIN / ESPI_IO_1 / QSPI_IO_1	S57	ESPI_IO_3/QSPI_IO_3
P58	SPI1_DO / ESPI_IO_0 / QSPI_IO_0	S58	ESPI_RESET#
P59	GND	S59	USB5+
P60	USB0+	S60	USB5-
P61	USB0-	S61	GND
P62	USB0_EN_OC#	S62	USB3_SSTX+
P63	USB0_VBUS_DET	S63	USB3_SSTX-
P64	USB0_OTG_ID	S64	GND
P65	USB1+	S65	USB3_SSRX+
P66	USB1-	S66	USB3_SSRX-
P67	USB1_EN_OC#	S67	GND
P68	GND	S68	USB3+
P69	USB2+	S69	USB3-
P70	USB2-	S70	GND
P71	USB2_EN_OC#	S71	USB2_SSTX+
P72	RSVD	S72	USB2_SSTX-
P73	RSVD	S73	GND
P74	USB3_EN_OC#	S74	USB2_SSRX+

P-Pin	Signal	S-Pin	Signal
	Key	S75	USB2_SSRX-
P75	PCIE_A_RST#		Key
P76	USB4_EN_OC#	S76	PCIE_B_RST#
P77	PCIE_B_CKREQ#	S77	PCIE_C_RST#
P78	PCIE_A_CKREQ#	S78	PCIE_C_RX+ / SERDES_1_RX+
P79	GND	S79	PCIE_C_RX- / SERDES_1_RX
P80	PCIE_C_REFCK+	S80	GND
P81	PCIE_C_REFCK-	S81	PCIE_C_TX+ / SERDES_1_TX+
P82	GND	S82	PCIE_C_TX- / SERDES_1_TX
P83	PCIE_A_REFCK+	S83	GND
P84	PCIE_A_REFCK-	S84	PCIE_B_REFCK+
P85	GND	S85	PCIE_B_REFCK-
P86	PCIE_A_RX+	S86	GND
P87	PCIE_A_RX-	S87	PCIE_B_RX+
P88	GND	S88	PCIE_B_RX-
P89	PCIE_A_TX+	S89	GND
P90	PCIE_A_TX-	S90	PCIE_B_TX+
P91	GND	S91	PCIE_B_TX-
P92	HDMI_D2+/DP1_LANE0+	S92	GND
P93	HDMI_D2-/DP1_LANE0-	S93	DPO_LANE0+
P94	GND	S94	DPO_LANE0-
P95	HDMI_D1+/DP1_LANE1+	S95	DPO_AUX_SEL
P96	HDMI_D1-/DP1_LANE1-	S96	DPO_LANE1+
P97	GND	S97	DPO_LANE1-
P98	HDMI_D0+/DP1_LANE2+	S98	DPO_HPD
P99	HDMI_D0-/DP1_LANE2-	S99	DPO_LANE2+
P100	GND	S100	DPO_LANE2-
P101	HDMI_CK+/DP1_LANE3+	S101	GND
P102	HDMI_CK-/DP1_LANE3-	S102	DPO_LANE3+
P103	GND	S103	DPO_LANE3-
P104	HDMI_HPD/DP1_HPD	S104	USB3_OTG_ID
P105	HDMI_CTRL_CK/DP1_AUX+	S105	DPO_AUX+
P106	HDMI_CTRL_DAT/DP1_AUX-	S106	DPO_AUX-
P107	DP1_AUX_SEL	S107	LCD1_BKLT_EN
P108	GPIO0/CAM0_PWR#	S108	LVDS1_CK+/eDP1_AUX+/DSI1_CLK+
P109	GPIO1/CAM1_PWR#	S109	LVDS1_CK-/eDP1_AUX-/DSI1_CLK-
P110	GPIO2/CAM0_RST#	S110	GND
P111	GPIO3/CAM1_RST#	S111	LVDS1_0+/eDP1_TX0+/DSI1_D0+
P112	GPIO4/HDA_RST#	S112	LVDS1_0-/eDP1_TX0-/DSI1_D0-
P113	GPIO5/PWM_OUT	S113	eDP1_HPD / DSI1_TE
P114	GPIO6/TACHIN	S114	LVDS1_1+/eDP1_TX1+/DSI1_D1+
P115	GPIO7	S115	LVDS1_1-/eDP1_TX1-/DSI1_D1-
P116	GPIO8	S116	LCD1_VDD_EN

P-Pin	Signal	S-Pin	Signal
P117	GPI09	S117	LVDS1_2+/eDP1_TX2+/DSI1_D2+
P118	GPI010	S118	LVDS1_2-/eDP1_TX2-/DSI1_D2-
P119	GPI011	S119	GND
P120	GND	S120	LVDS1_3+/eDP1_TX3+/DSI1_D3+
P121	I2C_PM_CK	S121	LVDS1_3-/eDP1_TX3-/DSI1_D3-
P122	I2C_PM_DAT	S122	LCD1_BKLT_PWM
P123	BOOT_SEL0#	S123	GPI013
P124	BOOT_SEL1#	S124	GND
P125	BOOT_SEL2#	S125	LVDS0_0+/eDP0_TX0+/DSIO_D0+
P126	RESET_OUT#	S126	LVDS0_0-/eDP0_TX0-/DSIO_D0-
P127	RESET_IN#	S127	LCD0_BKLT_EN
P128	POWER_BTN#	S128	LVDS0_1+/eDP0_TX1+/DSIO_D1+
P129	SER0_TX	S129	LVDS0_1-/eDP0_TX1-/DSIO_D1-
P130	SER0_RX	S130	GND
P131	SER0_RTS#	S131	LVDS0_2+/eDP0_TX2+/DSIO_D2+
P132	SER0_CTS#	S132	LVDS0_2-/eDP0_TX2-/DSIO_D2-
P133	GND	S133	LCD0_VDD_EN
P134	SER1_TX	S134	LVDS0_CK+/eDP0_AUX+/DSIO_CLK+
P135	SER1_RX	S135	LVDS0_CK-/eDP0_AUX-/DSIO_CLK-
P136	SER2_TX	S136	GND
P137	SER2_RX	S137	LVDS0_3+/eDP0_TX3+/DSIO_D3+
P138	SER2_RTS#	S138	LVDS0_3-/eDP0_TX3-/DSIO_D3-
P139	SER2_CTS#	S139	I2C_LCD_CK
P140	SER3_TX	S140	I2C_LCD_DAT
P141	SER3_RX	S141	LCD0_BKLT_PWM
P142	GND	S142	GPI012
P143	CAN0_TX	S143	GND
P144	CAN0_RX	S144	eDP0_HPDP / DSIO_TE
P145	CAN1_TX	S145	WDT_TIME_OUT#
P146	CAN1_RX	S146	PCIE_WAKE#
P147	VDD_IN	S147	VDD_RTC
P148	VDD_IN	S148	LID#
P149	VDD_IN	S149	SLEEP#
P150	VDD_IN	S150	VIN_PWR_BAD#
P151	VDD_IN	S151	CHARGING#
P152	VDD_IN	S152	CHARGER_PRSENT#
P153	VDD_IN	S153	CARRIER_STBY#
P154	VDD_IN	S154	CARRIER_PWR_ON
P155	VDD_IN	S155	FORCE_RECOV#
P156	VDD_IN	S156	BATLOW#
		S157	TEST#

8.2. LVDS Connector (J3)

This connector provides data and power connection between Carrier Board and Display. This 40-pin lockable connector contains the LVDS output signals and the power to the LVDS display.

Figure 15: 40-pin LVDS connector

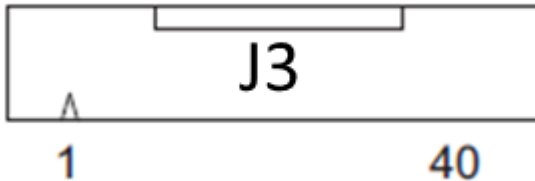


Table 14: LVDS connector

Pin	Signal	Description
1	LVDS_BKLT_CTRL	LVDS Backlight Control (PWM)
2	LVDS_A0-	LVDS odd channel 0, minus signal
3	LVDS_A0+	LVDS odd channel 0, plus signal
4	LVDS_VDD_EN	LVDS VDD enable signal
5	LVDS_A1-	LVDS odd channel 1, minus signal
6	LVDS_A1+	LVDS odd channel 1, plus signal
7	NC	Ground
8	LVDS_A2-	LVDS odd channel 2, minus signal
9	LVDS_A2+	LVDS odd channel 2, plus signal
10	GND	Ground
11	LVDS_A_CK-	LVDS odd channel clock, minus signal
12	LVDS_A_CK+	LVDS odd channel clock, plus signal
13	GND	Ground
14	LVDS_A3-	LVDS odd channel 3, minus signal
15	LVDS_A3+	LVDS odd channel 3, plus signal
16	LVDS_I2C_DAT	LVDS I2C Data
17	LVDS_B0-	LVDS even channel 0, minus signal
18	LVDS_B0+	LVDS even channel 0, plus signal
19	LVDS_IC2_CK	LVDS I2C Clock
20	LVDS_B1-	LVDS even channel 1, minus signal
21	LVDS_B1+	LVDS even channel 1, plus signal
22	GND	Ground
23	LVDS_B2-	LVDS even channel 2, minus signal
24	LVDS_B2+	LVDS even channel 2, plus signal
25	GND	Ground
26	LVDS_B_CK-	LVDS even channel clock, minus signal
27	LVDS_B_CK+	LVDS even channel clock plus signal
28	GND	Ground
29	LVDS_B3-	LVDS even channel 3, minus signal

Pin	Signal	Description
30	LVDS_B3+	LVDS even channel 3, plus signal
31	+5V	5V_VDD
32	+5V	5V_VDD
33	+5V	5V_VDD
34	+5V	5V_VDD
35	LVDS_BKLT_EN	LVDS Backlight Enable
36	GND	Ground
37	GND	Ground
38	+12V	12V_VDD
39	+12V	12V_VDD
40	+12V	12V_VDD

8.3. eDP Connector (J8)

Figure 16: 40-pin eDP Connector



Table 15: eDP Connector

Pin	Signal	Description
1	NC	Not Connected
2	12V0_eDP	Backlight Voltage 12V
3	12V0_eDP	Backlight Voltage 12V
4	12V0_eDP	Backlight Voltage 12V
5	12V0_eDP	Backlight Voltage 12V
6	NC	Not Connected
7	NC	Not Connected
8	eDP_BKLT_CTRL	Backlight Control (PWM)
9	LVDS_BKLT_EN	Backlight Enable
10	GND	Ground
11	GND	Ground
12	GND	Ground
13	GND	Ground
14	eDP_HPDCON	eDP Hotplug Detect
15	GND	Ground
16	GND	Ground
17	GND	Ground
18	GND	Ground
19	NC	Not Connected
20	VDD_eDP_OUT	eDP Panel VDD
21	VDD_eDP_OUT	eDP Panel VDD
22	VDD_eDP_OUT	eDP Panel VDD
23	VDD_eDP_OUT	eDP Panel VDD
24	GND	Ground
25	eDPO_C_AUX-	eDP Clock Auxiliary minus signal
26	eDPO_C_AUX+	eDP Clock Auxiliary plus signal
27	GND	Ground
28	eDPO_TX0_C+	eDP Transmit 0 plus signal
29	eDPO_TX0_C-	eDP Transmit 0 minus signal

Pin	Signal	Description
30	GND	Ground
31	eDPO_TX1_C+	eDP Transmit 1 plus signal
32	eDPO_TX1_C-	eDP Transmit 1 minus signal
33	GND	Ground
34	eDPO_TX2_C+	eDP Transmit 2 plus signal
35	eDPO_TX2_C-	eDP Transmit 2 minus signal
36	GND	Ground
37	eDPO_TX3_C+	eDP Transmit 3 plus signal
38	eDPO_TX3_C-	eDP Transmit 3 minus signal
39	GND	Ground
40	NC	Not Connected

8.4. HDMI connector (J42)

Figure 17: 19-pin HDMI connector

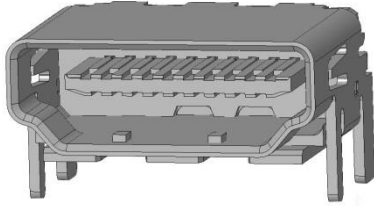


Table 16: HDMI connector

Pin	Signal
1	TMDS Data2+
2	TMDS Data2 Shield
3	TMDS Data2-
4	TMDS Data1+
5	TMDS Data1 Shield
6	TMDS Data1-
7	TMDS Data0+
8	TMDS Data0 Shield
9	TMDS Data0-
10	TMDS Clock+
11	TMDS Clock Shield
12	TMDS Clock-
13	CEC
14	Reserved/Utility
15	SCL
16	SDA
17	DDC/CEC Ground
18	+5V Power
19	Hot Plug Detect

8.5. DP connector (J12)

Figure 18: 20-pin DP connector

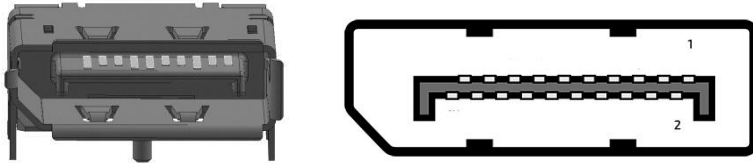


Table 17: DP connector

Pin	Signal	Pin	Signal
1	ML LANE 0+	2	GND (ML LANE 0)
3	ML LANE 0-	4	ML LANE 1+
5	GND (ML LANE 1)	6	ML LANE 1-
7	ML LANE 2+	8	GND (ML LANE 2)
9	ML LANE 2-	10	ML LANE 3+
11	GND (ML LANE 3)	12	ML LANE 3-
13	AUX_SEL#	14	Pull-down to GND
15	AUX CH+	16	GND (AUX CH)
17	AUX CH-	18	Hot plug
19	GND (GND_DDC)	20	+3.3V (DDC EEPROM power) Max 500mA

8.6. Mini PCIe Card socket 1 (J13)

Figure 19: 52-pin Mini PCIe Card

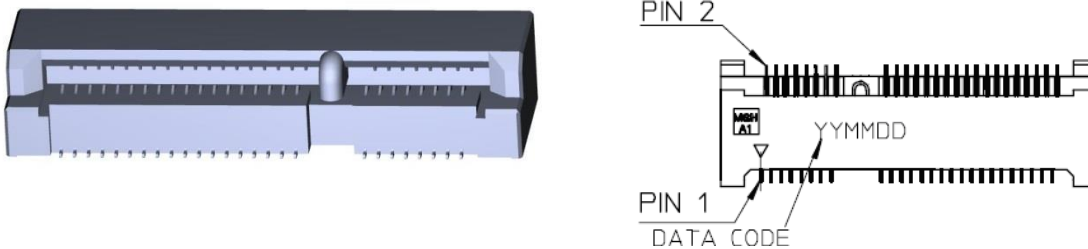


Table 18: Mini PCIe Card

Pin	Signal	Pin	Signal
1	WAKE#	2	+3.3V_S5
3	N.C.	4	GND
5	N.C.	6	+1.5V_S0
7	CLKREQ#	8	UIM-PWR
9	GND	10	UIM-DATA
11	PCIe_REFCLK-	12	UIM-CLK

Pin	Signal	Pin	Signal
13	PCIe_REFCLK+	14	UIM-RST
15	GND	16	UIM-VPP
17	UIM-C8	18	GND
19	UIM-C4	20	W_DISABLE#
21	GND	22	PLTRST#
23	PCIe_RX-	24	+3.3V_S5
25	PCIe_RX+	26	GND
27	GND	28	+1.5V_S0
29	GND	30	PU 3.3V(S5) (Optional: SMB_CLK)
31	PCIe_TX-	32	PU 3.3V(S5) (Optional: SMB_DAT)
33	PCIe_TX+	34	GND
35	GND	36	USB_D-
37	GND	38	USB_D+
39	+3.3V_S5	40	GND
41	+3.3V_S5	42	PU 3.3V(S0)
43	GND	44	PU 3.3V(S0)
45	N.C.	46	PU 3.3V(S0)
47	N.C. (optional MDIO_CLK)	48	+1.5V_S0
49	N.C. (optional MDIO_DAT)	50	GND
51	N.C.	52	+3.3V_S5

8.7. Mini PCIe Card socket 2 (J20)

Figure 20: 52-pin Mini PCIe Card

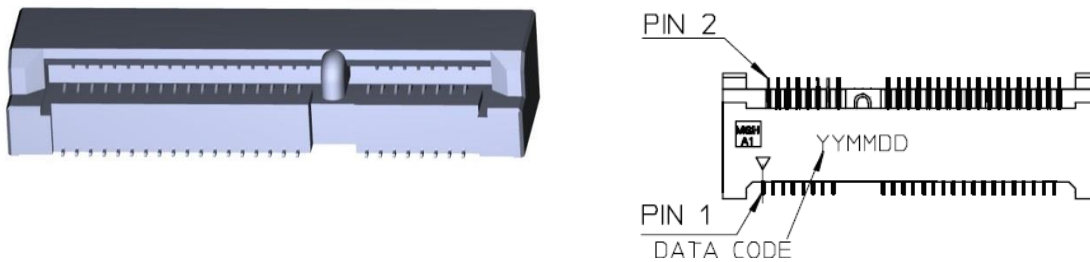


Table 19: Mini PCIe Card

Pin	Signal	Pin	Signal
1	WAKE#	2	+3.3V_S5
3	N.C.	4	GND
5	N.C.	6	+1.5V_S0
7	CLKREQ#	8	UIM-PWR
9	GND	10	UIM-DATA
11	PCIe_REFCLK-	12	UIM-CLK

Pin	Signal	Pin	Signal
13	PCIe_REFCLK+	14	UIM-RST
15	GND	16	UIM-VPP
17	UIM-C8	18	GND
19	UIM-C4	20	W_DISABLE#
21	GND	22	PLTRST#
23	PCIe_RX-	24	+3.3V_S5
25	PCIe_RX+	26	GND
27	GND	28	+1.5V_S0
29	GND	30	PU 3.3V(S5) (Optional: SMB_CLK)
31	PCIe_TX-	32	PU 3.3V(S5) (Optional: SMB_DAT)
33	PCIe_TX+	34	GND
35	GND	36	USB_D-
37	GND	38	USB_D+
39	+3.3V_S5	40	GND
41	+3.3V_S5	42	PU 3.3V(S0)
43	GND	44	PU 3.3V(S0)
45	N.C.	46	PU 3.3V(S0)
47	Optional MDIO_CLK	48	+1.5V_S0
49	Optional MDIO_DATA	50	GND
51	N.C.	52	+3.3V_S5

8.8. SIM card socket (J46)

Figure 21: 8-pin SIM card socket

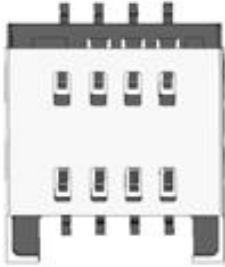


Table 20: SIM card socket

Pin	Signal
1	UIM_PWR
2	UIM_RST
3	UIM_CLK
4	UIM_C4
5	GND
6	UIM_VPP/NC
7	UIM_DATA
8	UIM_C8

NOTICE

Never use two mPCIe cards in both slots using UIM interface at the same time. SIM Card is directly shared between both slots.

8.9. PCIe x1 connector 1 (J2)

Figure 22: 52-pin PCIe x1 connector



Table 21: PCIe x1 connector

Pin	Signal	Pin	Signal
A1	PRSNT1#	B1	V_12V0_S0

Pin	Signal	Pin	Signal
A2	V_12V0_S0	B2	V_12V0_S0
A3	V_12V0_S0	B3	V_12V0_S0
A4	GND	B4	GND
A5	JTAG2_TCK	B5	SMCLK
A6	JTAG3_TDI	B6	SMDAT
A7	JTAG4_TDO	B7	GND
A8	JTAG5_TMS	B8	V_3V3_S0
A9	V_3V3_S0	B9	JTAG1_TRST#
A10	V_3V3_S0	B10	V_3V3_AUX
A11	PERST#	B11	WAKE#
A12	GND	B12	RSVD – N.C.
A13	REFCLK+	B13	GND
A14	REFCLK-	B14	PET0+
A15	GND	B15	PET0-
A16	PER0+	B16	GND
A17	PER0-	B17	PRSNT2#
A18	GND	B18	GND

8.10. PCIe x1 connector 2 (J5)

Figure 23: 52-pin PCIe x1 connector

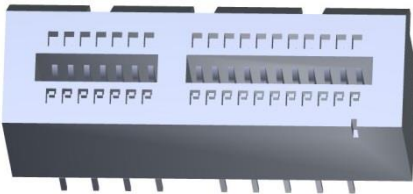


Table 22: PCIe x1 connector

Pin	Signal	Pin	Signal
A1	PRSNT1#	B1	V_12V0_S0
A2	V_12V0_S0	B2	V_12V0_S0
A3	V_12V0_S0	B3	V_12V0_S0
A4	GND	B4	GND
A5	JTAG2_TCK	B5	SMCLK
A6	JTAG3_TDI	B6	SMDAT
A7	JTAG4_TDO	B7	GND
A8	JTAG5_TMS	B8	V_3V3_S0
A9	V_3V3_S0	B9	JTAG1_TRST#
A10	V_3V3_S0	B10	V_3V3_AUX
A11	PERST#	B11	WAKE#
A12	GND	B12	RSVD – N.C.
A13	REFCLK+	B13	GND

Pin	Signal	Pin	Signal
A14	REFCLK-	B14	PET0+
A15	GND	B15	PET0-
A16	PER0+	B16	GND
A17	PER0-	B17	PRSNT2#
A18	GND	B18	GND

8.11. SATA connector (J22)

Table 23: SATA

Pin	Signal	Pin	Signal
1	GND	2	A+ (transmit)
3	A- (transmit)	4	GND
5	B- (receive)	6	B+ (receive)
7	GND	-	Coding notch

8.12. Audio Connector Line In (J24/J43)

Figure 24: Audio Jacks



Table 24: Pin Assignment J43 (green)

Pin	Signal
1	Audio GND
2	Line Out Left
3	Line Out Sense
4	Audio GND
5	Line Out Right

Table 25: Pin Assignment J24 (blue)

Pin	Signal
1	Audio GND
2	Line In Left
3	Line In Sense
4	Audio GND
5	Line In Right

8.13. Audio Connector (J10)

Figure 25: 9-pin Audio Connector Header



Table 26: Audio Connector Header

Pin	Signal	Pin	Signal
1	MIC_L	2	AGND
3	MIC_R	4	PRESENCE#
5	HEADPHONE_R	6	MIC_JD
7	SENSE	8	-
9	HEADPHONE_L	10	LINE_JD

8.14. RTC battery holder (J37)

Figure 26: RTC battery holder

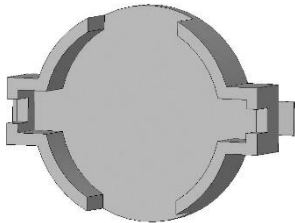


Table 27: RTC battery holder

Pin	Signal
Positive (+)	V_BAT_INT
Negative (-)	GND

8.15. MicroUSB 2.0 OTG connector (J39)

Figure 27: MicroUSB 2.0 OTG connector

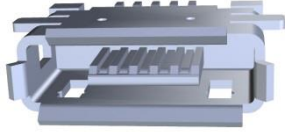


Table 28: MicroUSB 2.0 OTG

Pin	Signal
1	+5 V USB output (500 mA max.)
2	USB Data -
3	USB Data +
4	ID
5	Ground

8.16. USB 3.0 Type A (J41)

Figure 28: USB 3.0 socket

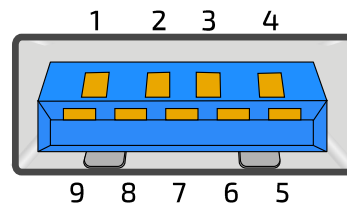


Table 29: Pin Assignment


Pin	Type	Signal	Note
1	PWR	5 V/SB 5 V	
2	IO	USB 2.0 D-	
3	IO	USB 2.0 D+	
4	PWR	GND	
5	IO	USB 3.0 RX 2-	
6	IO	USB 3.0 RX 2+	
7	PWR	GND	
8	IO	USB 3.0 TX 2-	
9	IO	USB 3.0 TX 2+	

Table 30: Signal Description

Signal	Description
USBn+ USBn- RXn+ RXn- TXn+ TXn-	Differential pair works as serial differential receive/transmit data lines. (n= 0,1,2,3)
5 V/SB5 V	5 V supply for external devices. SB5 V is supplied during power-down to allow wakeup on USB device activity. Power is maximum 1A for each USB 3.0 port (protected with 1A load switch for each port).


For HiSpeed rates it is required to use a USB cable, which is specified in USB2.0 standard:

Figure 29: USB 2.0 High Speed Cable

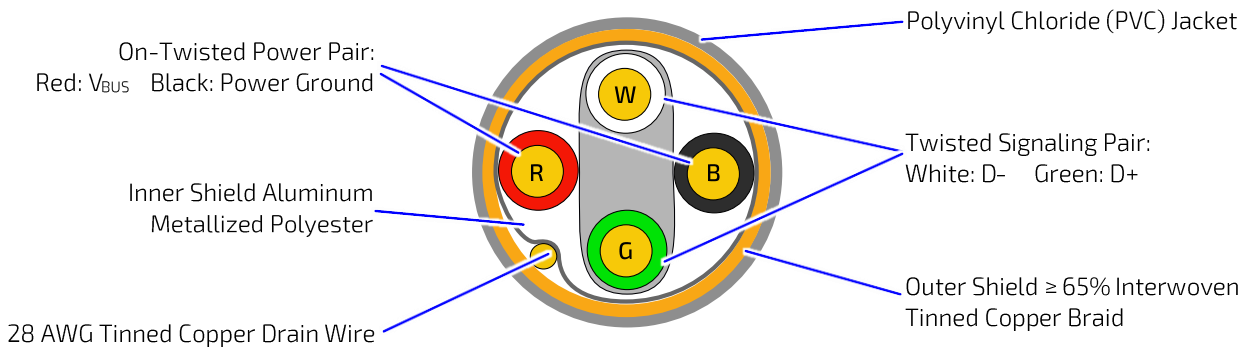

For SuperSpeed rates it is required to use a USB cable, which is specified in USB3.0 standard:

Figure 30: USB 3.0 High Speed Cable

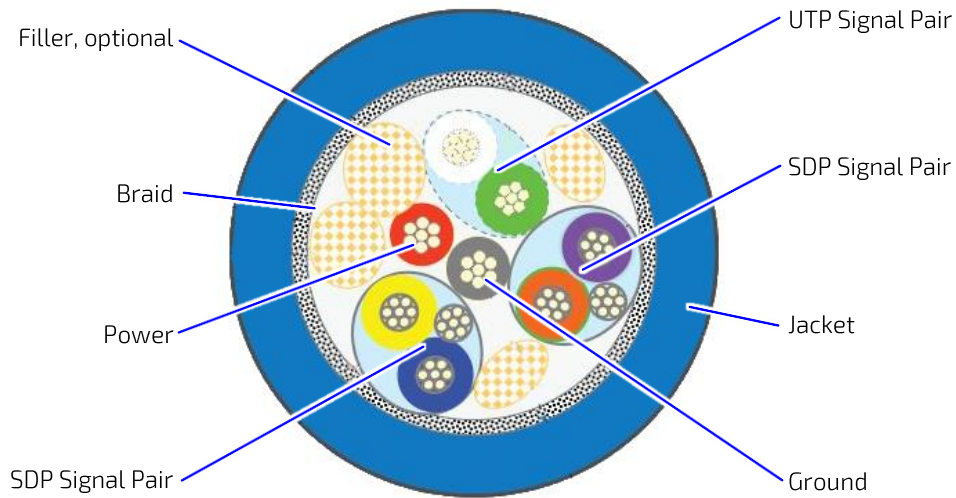

8.17. USB 3.X USB C Connector (J60)

Figure 31: USB C Receptable

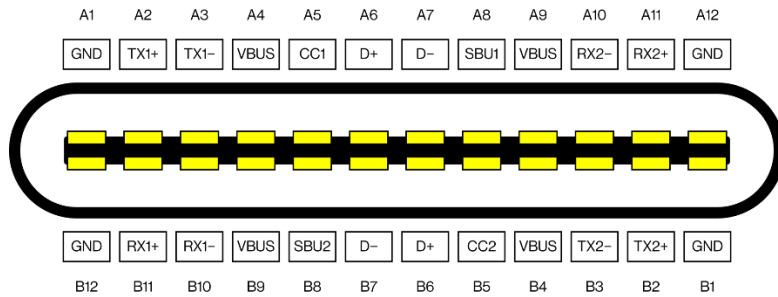


Table 31: USB Header

Pin	Signal	Pin	Signal
A1	Ground	B1	Ground
A2	TX1+	B2	TX2+
A3	TX1-	B3	TX2-
A4	VBUS	B4	VBUS
A5	CC1	B5	CC2
A6	USB Data +	B6	USB Data +
A7	USB Data -	B7	USB Data -
A8	SBU1	B8	SBU2
A9	VBUS	B9	VBUS
A10	RX2-	B10	RX1-
A11	RX2+	B11	RX1+
A12	Ground	B12	Ground

8.18. USB 2.0 internal connector (J59)

Table 32: USB 2.0 connector

Pin	Signal	Pin	Signal
1	+5 V USB output (500 mA max.)	2	USB Data -
3	USB Data +	4	GND

8.19. Dual LAN Connector (J63)

This connector provides an two isolated Ethernet 2500Base-T port, which is connected to an on-board LAN Controller. The galvanic isolated transformers (1500 V_{rms}, Voltage Regulator Module (VRM)) are integrated in the LAN connectors.

Figure 32: Dual LAN Connector

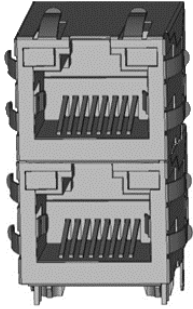


Table 33: LAN Connector (2 times)

Pin UP	Signal	Pin DOWN	Signal
U1	GBE0_CTREF	D1	GBE1_CTREF
U2	GBE0_MDIO0+	D2	GBE1_MDIO0+
U3	GBE0_MDIO0-	D3	GBE1_MDIO0-
U4	GBE0_MDIO1+	D4	GBE1_MDIO1+
U5	GBE0_MDIO2+	D5	GBE1_MDIO2+
U6	GBE0_MDIO2-	D6	GBE1_MDIO2-
U7	GBE0_MDIO1-	D7	GBE1_MDIO1-
U8	GBE0_MDIO3+	D8	GBE1_MDIO3+
U9	GBE0_MDIO3-	D9	GBE1_MDIO3-
U10	NC	D10	NC
U11	GBE0_LED_R_GRN_YEL#	D11	GBE1_LED_R_GRN_YEL#
U12	GBE0_LED_R_YEL_GRN#	D12	GBE1_LED_R_YEL_GRN#
U13	GBE0_LED_L_AC_FB1	D13	GBE1_LED_L_AC_FB1
U14	GBE0_LED_L_GRN#	D14	GBE1_LED_L_GRN#

Table 34: Left LEDs LAN Connector

Left LED State	Link Activity State
Off	Link not active
Green (constant on)	Link active
Green (flashing)	Link active plus activity

Table 35: Right LEDs LAN Connector

Right LED State	Link Speed
Off	10 Base-T
Green (constant on)	100 Base-T
Green (flashing)	1000 Base-T

8.20. Micro- μ SD Card Connector (J11)

Figure 33: Micro- μ SD Card Connector

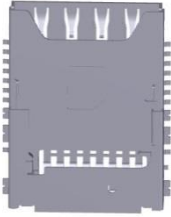


Table 36: Micro- μ SD Card Connector

Pin	Signal
1	SD_DAT[2]
2	CD/SD_DAT[3]
3	CMD
4	VDD
5	SD_CLK
6	GND/VSS
7	SD_DAT[0]
8	SD_DAT[1]
9	CD_DETECT
10	CD_GND
11	SH_GND
12	SH_GND
13	SH_GND
14	SH_GND

8.21. UART-SER Connector (J29/J30)

These standard double D-SUB 9-pin connector contain the SER0 to SER3 signals.

Figure 34: Double D-SUB 9-pin Connector

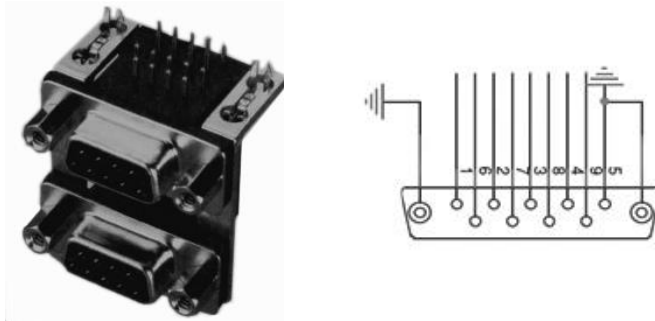


Table 37: J29 Bottom SER0/UART0

Pin	Signal	Direction
1	N.C.	
2	RXD (Receive Data)	In
3	TXD (Transmit Data)	Out
4	N.C.	
5	GND	
6	N.C.	
7	RTS# (Request to Send)	Out
8	CTS# (Clear to Send)	In
9	N.C.	

Table 38: J29 Top SER1/UART1

Pin	Signal	Direction
1	N.C.	
2	RXD (Receive Data)	In
3	TXD (Transmit Data)	Out
4	N.C.	
5	GND	
6	N.C.	
7	N.C.	
8	N.C.	
9	N.C.	

Table 39: J30 Bottom SER2/UART2

Pin	Signal	Direction
1	N.C.	
2	RXD (Receive Data)	In
3	TXD (Transmit Data)	Out
4	N.C.	
5	GND	
6	N.C.	
7	RTS# (Request to Send)	Out
8	CTS# (Clear to Send)	In
9	N.C.	

Table 40: J30 Top SER3/UART3

Pin	Signal	Direction
1	N.C.	
2	RXD (Receive Data)	In
3	TXD (Transmit Data)	Out
4	N.C.	
5	GND	
6	N.C.	
7	N.C.	
8	N.C.	
9	N.C.	

8.2.2. CAN Connector (J6/J7)

Figure 35: CAN_0/CAN_1 Connector

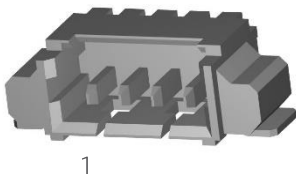


Table 41: CAN_0/CAN_1 Connector

Pin	Signal
1	CAN0_L
2	CAN0_H
3	V_5V0
4	GND

8.23. Camera Serial Interface (CSIO) Connector (J36)

Figure 36: 15-pin Camera CSI Connector



Table 42: Camera CSI Connector

Pin	Signal
1	NC
2	NC
3	CSIO_RX0-
4	NC
5	CSIO_RX0+
6	NC
7	CSIO_CLK-
8	CSIO_PCLK
9	CSIO_CLK+
10	GND
11	CSIO_RX1+
12	CSIO_XCLK_1V8
13	CSIO_RX1+
14	V_1V8_S0_CSIO
15	V_1V5_S0_CSIO
16	CSIO_HREF
17	CSIO_PWDN_1V8_C
18	CSIO_VSYNC
19	RESET_CSIO_1V8_C
20	CSIO_I2C_CLK_1V8_C
21	V_2V8_DAT_1V8_C
22	CSIO_I2C_DAT_1V8_C
23	AGND_CSI
24	NC


Pin 14: 1.8 V with resettable fuse 0.75 A

Pin 15: 1.5 V with resettable fuse 0.75 A

Pin 21: 2.8 V from LDO regulator with over current protection. Maximum 100 mA not fused.

8.24. Camera Serial Interface (CSI1) Connector (J61)

 Figure 37: 20-pin Camera CSI Connector



1

Table 43: Camera CSI Connector

Pin	Signal
1	GND
2	CSI1_RX0-
3	CSI1_RX0+
4	GND
5	CSI1_RX1-
6	CSI1_RX1+
7	GND
8	CSI1_RX2-
9	CSI1_RX2+
10	GND
11	CSI1_RX3-
12	CSI1_RX3+
13	GND
14	CSI1_CLK-
15	CSI1_CLK+
16	GND
17	CSI1_CAM_CLK_1V8
18	CSI1_I2C_CLK_3V3
19	CSI1_I2C_DAT_3V3
20	V_3V3_S0_CSI1

Pin 20 with 3.3 V and 0.75 A resettable fuse

8.25. GPIO Header (J38)

Figure 38: 2x8-pin GPIO Header

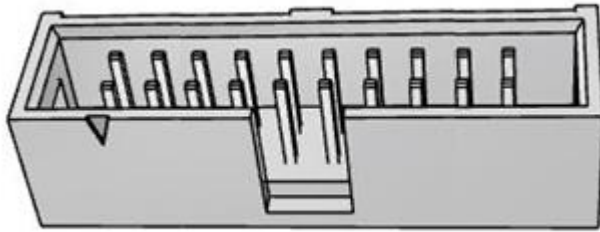


Table 44: GPIO Header

Pin	Signal	Pin	Signal
1	V_1V8_S0	2	V_3V3_S0
3	GPIO0/CAM0_PWR#	4	GPIO_1
5	GPIO2/CAM0_RST#	6	GPIO_3
7	GPIO4/HDA_RST#	8	GPIO_5
9	GPIO6/TACHIN	10	GPIO_7
11	GPIO_8	12	GPIO_9
13	GPIO_10	14	GPIO_11
15	GND	16	GND

8.26. Enhanced Serial Peripheral Interface Bus (eSPI) Connector (J47)

Figure 39: 2x7-pin eSPI Connector

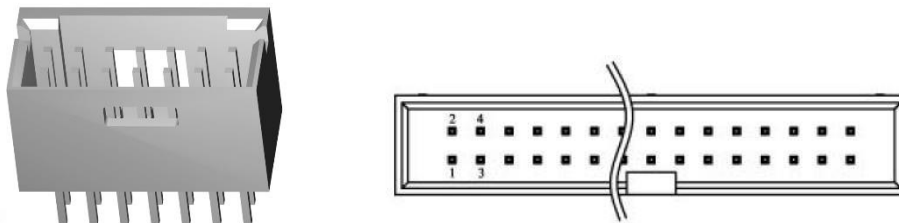


Table 45: eSPI Connector

Pin	Signal	Pin	Signal
1	VCC 1.8V	2	VCC 3.3V
3	ESPI_CS0	4	ESPI_CS1
5	ESPI_IO0	6	ESPI_IO1
7	ESPI_IO2	8	ESPI_IO3
9	ESPI_RESET#	10	ESPI_ALERT0
11	ESPI_ALERT1	12	ESPI_CK
13	GND	14	GND

8.27. Power Management Header (J45)

Figure 40: 2x8-pin Power Management Header

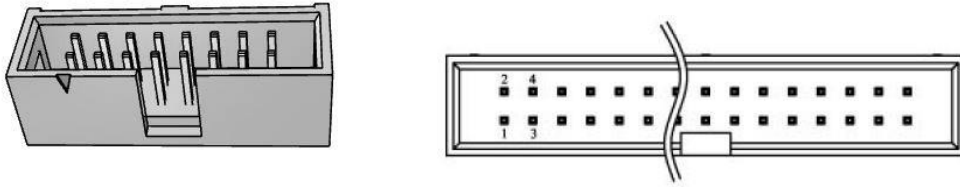


Table 46: Power Management Header

Pin	Signal	Pin	Signal
1	VCC 1.8V	2	VCC 3.3V
3	VIN_PWR_BAD#	4	CARRIER_PWR_ON#
5	CARRIER_STB#	6	SLEEP#
7	LID#	8	PWR_BTN
9	RESET_OUT#	10	RESET_IN#
11	BATLOW#	12	I2C_PM_DAT
13	I2C_PM_CK	14	SMB_ALERT_1V8#
15	GND	16	GND

8.28. Fan Connector (J62)

Figure 41: 4-pin Fan Connector

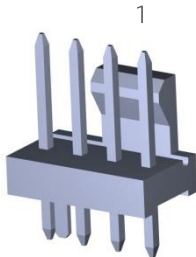


Table 47: Fan Connector

Pin	Signal	Description
1	GND	
2	V_50_FAN	12 V by default. Can optionally be changed to 5 V, via removing FB69 and populating FB68.
3	FAN_TACH_J	FAN-Tacho signal
4	FAN_PWMOUT_J	PWM output for FAN control

8.29. Power-In Connector (J53)

Figure 42: Power-In Connector

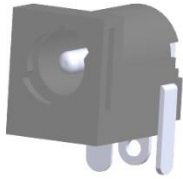


Table 43: Power-In Connector

Pin	Signal	Description
1	V_12V0_IN_CON	Main power input for either both module and carrier (default), or for carrier only, when J54 is used.
2	GND	

⚠ CAUTION

The board can be supplied via the AC/DC adapter plugged into the power jack. Such adapters have usually no connection to protective earth. Consequently, the potential of the conductive parts on the board may drift. If a human touches such a part, this may lead to an electric shock. The board must be grounded separately, if the unit is supplied via power jack.

8.30. Alternative Power-In Connector (J66)

Figure 44: Alternative Power-In Connector

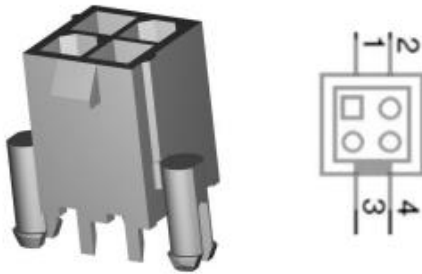


Table 45: Module Power-In Connector

Pin	Signal	Description
1	GND	Main power input for either both module and carrier (default), or for carrier only, when J54 is used.
2	GND	
3	V_12V0_IN_CON	Not connected
4	V_12V0_IN_CON	

8.31. Module Power-In Connector (J54)

Figure 46: Module Power-In Connector

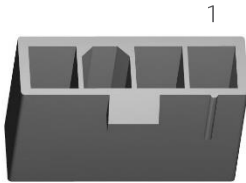


Table 47: Module Power-In Connector


Pin	Signal	Description
1	V_MODULE	Module Power from 3.0 V to 5.25 V is independent from Carrier power.
2	GND	
3	V_MODULE	Module Power from 3.0 V to 5.25 V is independent from Carrier power.
4	GND	

NOTICE

There are two different ways to power the carrier and module:

- ▶ **Default and recommended:** Power Connector J53 or alternatively J66 with 12 V, which also delivers 5 V to the module and 12 V to the board. Jumper V_MOD must be on position INT.

Figure 48: Red Jumper on position INT

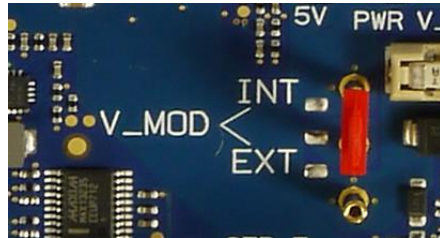

- ▶ **Alternative:** Power Connector J53 with 12 V and Power Connector J54 with 5 V, which delivers power separately to the board (12 V) and module. Jumper V_MOD must be on position EXT.

NOTICE

If any of the supply voltages drops below the allowed operating level longer than the specified hold-up time, all the supply voltages should be shut down and left OFF for a time long enough to allow the internal board voltages to discharge sufficiently. If the OFF time is not observed, parts of the board or attached peripherals may work incorrectly or even suffer a reduction of MTBF. The minimum OFF time depends on the implemented PSU model and other electrical factors and needs to be measured individually for each case.

8.32. Button Switch

Figure 49: Button Switch

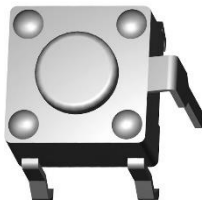


Table 48: Power Button (SW3, J26)

Pin	Signal
1	POWER_BTN#
2	POWER_BTN#
3	GND
4	GND
5	SHIELD

Table 49: Reset Button (SW1, J25)

Pin	Signal
1	RESET_IN#
2	RESET_IN#
3	GND
4	GND
5	SHIELD

Table 50: Force Recovery Button (SW4, J27)

Pin	Signal
1	FORCE_RECOV#
2	FORCE_RECOV#
3	GND
4	GND
5	SHIELD

8.33. Boot Selection Jumpers (J28, J32, J33) and other Jumpers

There are three Jumpers for Boot Select according to the SMARC 2.0 specification.

Figure 50: Jumpers for Boot Select



Table 51: Boot Selection Jumpers

	Carrier Connection			Boot Source
	BOOT_SEL2# (J33)	BOOT_SEL1# (J32)	BOOT_SEL0# (J28)	
1	GND	GND	GND	Carrier SATA
2	GND	GND	Float	Carrier SD Card
3	GND	Float	GND	Carrier eSPI (ESPI_CS0#)
4	GND	Float	Float	Carrier SPI (SPI0_CS0#)
5	Float	GND	GND	Module device (NAND, NOR) – vendor specific
6	Float	GND	Float	Remote boot (GBE, serial) – vendor specific
7	Float	Float	GND	Module eMMC Flash



Boot options for the SMARC-sXAL (BOOT_SEL2#):

Only boot from module BIOS or carrier BIOS are supported, no other boot options are supported.

- ▶ To boot from module, remove shunt jumper on J33 (BOOT_SEL2#) of SMARC-Eval-Carrier-2.
 - ▶ To boot from carrier, place shunt jumper on J33 (BOOT_SEL2#) of SMARC-Eval-Carrier-2.
-

Table 52: Display Power Select Jumper (J4)

Jumper Position	Function description
1-2	LVDS panel power (V_5V0_3V3_S0 pins 28-30) is 5.0V
2-3 (Default)	LVDS panel power (V_5V0_3V3_S0 pins 28-30) is 3.3V

Table 53: Backlight Power Select Jumper (J23)

Jumper Position	Function description
1-2	Backlight power (V_BKLT) is 5.0V
2-3 (Default)	Backlight power (V_BKLT) is 12V

Table 54: LID Jumper (J34)

Jumper Position	Function description
Open (Default)	LID Inactive
Close	LID Active

Table 55: TEST Jumper (J35)

Jumper Position	Function description
Open (Default)	TEST# not active
Close	TEST# active

Table 56: LEDs Enable Jumper (J44)

Jumper Position	Function description
Open (Default)	LEDs not active
Close	LEDs active

Table 57: RESET Jumper (J25)

Jumper Position	Function description
Open (Default)	Reset Signal Inactive
Close	Reset Signal Active

Table 58: Power Jumper (J26)

Jumper Position	Function description
Open (Default)	Power Signal Inactive
Close	Power Signal Active

Table 59: Force Recovery Jumper (J27)

Jumper Position	Function description
Open (Default)	Regular boot
Close	Force Recovery

Figure 51: Module Power Select Jumper (J55, J56, J57)

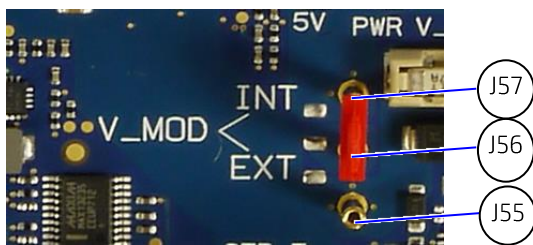


Table 60: Module Power Select Jumper (J55, J56, J57)

Jumper Position	Function description
J56 - J57 (Default)	SMARC module powered from carrier by 5 V power
J56 – J55	SMARC module powered from external connector J54

Table 61: Audio Channel Jumper for I2S or HDA (J31)

Jumper Position	Function description
Open (Default)	HDA Codec Active
Close	I2S Codec Active

NOTICE Jumper J31 should not be changed when power is present.

Table 62: mPCIe-1WLAN Disable Jumper (J49, J50)

Jumper Position	Function description
Open (Default)	WLAN in mPCIe slot J13 active
Close	WLAN in mPCIe slot J13 inactive

Table 63: mPCIe-1WLAN Disable Jumper (J51, J52)

Jumper Position	Function description
Open (Default)	WLAN in mPCIe slot J13 active
Close	WLAN in mPCIe slot J13 inactive

Figure 52: RTC Jumper (J58)

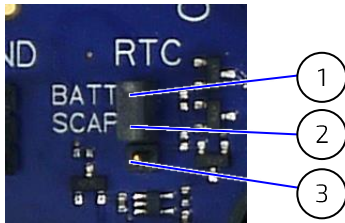


Table 64: RTC Jumper (J58)

Jumper Position	Function description
1-2 (Default)	Module RTC is powered from battery (J37)
2-3	Module RTC is powered from super cap (C364)

9/ Technical Support

For technical support contact our Support department:

E-mail: support@kontron.com

Phone: +49-821-4086-888

Make sure you have the following information available when you call:

Product ID Number (PN),

Serial Number (SN)



The serial number can be found on the Type Label, located on the product's rear side.

Be ready to explain the nature of your problem to the service technician.

9.1. Warranty

Due to their limited service life, parts that by their nature are subject to a particularly high degree of wear (wearing parts) are excluded from the warranty beyond that provided by law. This applies to the CMOS battery, for example.



If there is a protection label on your product, then the warranty is lost if the product is opened.

9.2. Returning Defective Merchandise

All equipment returned to Kontron must have a Return of Material Authorization (RMA) number assigned exclusively by Kontron. Kontron cannot be held responsible for any loss or damage caused to the equipment received without an RMA number. The buyer accepts responsibility for all freight charges for the return of goods to Kontron's designated facility. Kontron will pay the return freight charges back to the buyer's location in the event that the equipment is repaired or replaced within the stipulated warranty period. Follow these steps before returning any product to Kontron.

1. Visit the RMA Information website:
<http://www.kontron.com/support-and-services/support/rma-information>

Download the RMA Request sheet for **Kontron Europe GmbH** and fill out the form. Take care to include a short detailed description of the observed problem or failure and to include the product identification Information (Name of product, Product number and Serial number). If a delivery includes more than one product, fill out the above information in the RMA Request form for each product.

2. Send the completed RMA-Request form to the fax or email address given below at Kontron Europe GmbH. Kontron will provide an RMA-Number.

Kontron Europe GmbH
RMA Support
Phone: +49 (0) 821 4086-0
Fax: +49 (0) 821 4086 111
Email: service@kontron.com

3. The goods for repair must be packed properly for shipping, considering shock and ESD protection.



Goods returned to Kontron Europe GmbH in non-proper packaging will be considered as customer caused faults and cannot be accepted as warranty repairs.

4. Include the RMA-Number with the shipping paperwork and send the product to the delivery address provided in the RMA form or received from Kontron RMA Support.

List of Acronyms

ATA	Advanced Technology Attachment
COM	Serial Communication Port
DP	DisplayPort
EC	Embedded Controller
EEPROM	Electrically Erasable Programmable Read Only Memory
ESD	Electro Static Discharge
Flash	Non-Volatile Memory
FPGA	Field Programmable Gate Array
Gold Flash Plating	Very thin gold plating (e.g. on contacts)
I/O	Input/Output
I2C	Inter IC bus (IIC or I2C)
JTAG	Joint Test Action Group, is a debug and programming port
LED	Light Emitting Diode
NC	Not connected
PCB	Printed Circuit Board
PCIe	Peripheral Component Interconnect Express
PHY	Physical Layer (IC)
PU	Pull-up
RS-232	Recommended Standard 232
RTC	Real Time Clock
SATA	Serial ATA
SMARC	Smart Mobility ARChitecture
SPI	Serial Peripheral Interface
SSD	Solid State Drive
TTL	Transistor-Transistor-Logic
UART	Universal Asynchronous Receiver and Transmitter
USB	Universal Serial Bus
VGA	Video Graphics Array: analog graphic output
VHDL	Very high speed integrated circuit Hardware Description Language
VRM	Voltage Regulator Module



About Kontron – Member of the S&T Group

Kontron is a global leader in Embedded Computing Technology (ECT). As a part of technology group S&T, Kontron offers a combined portfolio of secure hardware, middleware and services for Internet of Things (IoT) and Industry 4.0 applications. With its standard products and tailor-made solutions based on highly reliable state-of-the-art embedded technologies, Kontron provides secure and innovative applications for a variety of industries. As a result, customers benefit from accelerated time-to-market, reduced total cost of ownership, product longevity and the best fully integrated applications overall.

For more information, please visit: <http://www.kontron.com/>



Global Headquarters

Kontron Europe GmbH
Gutenbergstraße 2
85737 Ismaning
Germany
Tel.: +49 821 4086-0
Fax: +49 821 4086-111
info@kontron.com